


## SPEED SENSOR ON-VEHICLE REPAIR

AT13M-01

### 1. DISCONNECT SPEED SENSOR NT AND SP2 CONNECTOR

### 2. REMOVE SPEED SENSOR NT AND SP2


- (a) Remove the 2 bolts, speed sensors NT and SP2.

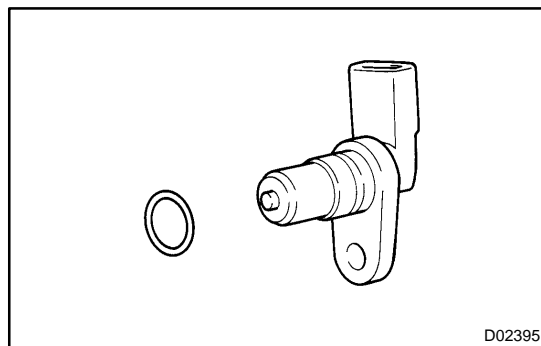

- (b) Remove the 2 O-rings from the speed sensors NT and SP2.

### 3. INSTALL SPEED SENSOR NT AND SP2

- (a) Coat 2 new O-rings with ATF and install them to the speed sensors NT and SP2.

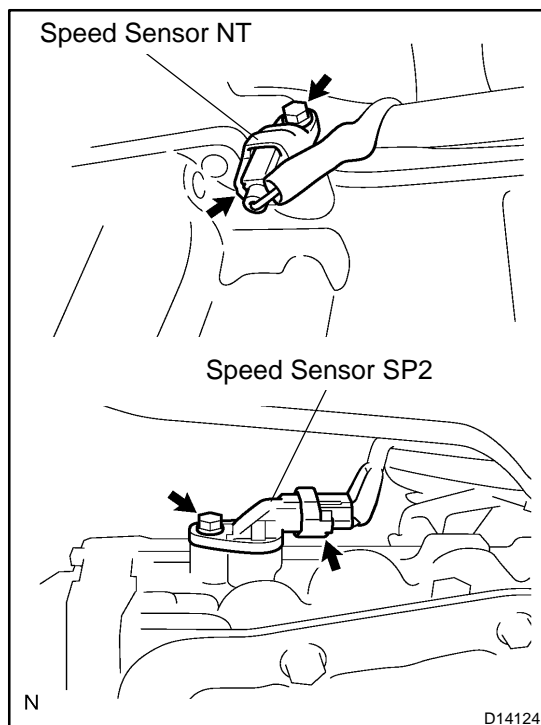

- (b) Install the speed sensors NT and SP2 with the 2 bolts.

**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**

### 4. CONNECT SPEED SENSOR NT AND SP2 CONNECTOR