


INSPECTION

1. INSPECT CARGO LIGHT SWITCH CONTINUITY

- Remove the integration control panel.
- Check that continuity exists between terminals 3 and 10 with the switch ON.
- Check that no continuity exists between terminals 3 and 10 with the switch OFF.

If the continuity is not as specified, replace the panel.

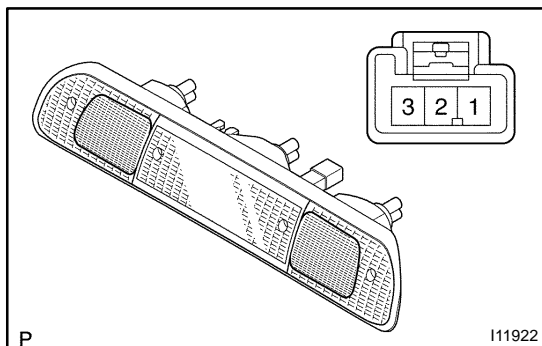

2. INSPECT CARGO LIGHT ASSEMBLY CONTINUITY

Using an ohmmeter, check that continuity exists between terminals 3 and 2.

If the continuity is not as specified, replace the bulb or the stop light assembly.