


INSPECTION

1. INSPECT CARGO LIGHT SWITCH CONTINUITY

- Remove the integration control panel.
- Check that continuity exists between terminals 9 and 1 with the switch ON.
- Check that no continuity exists between terminals 9 and 1 with the switch OFF.

If the continuity is not as specified, replace the panel.

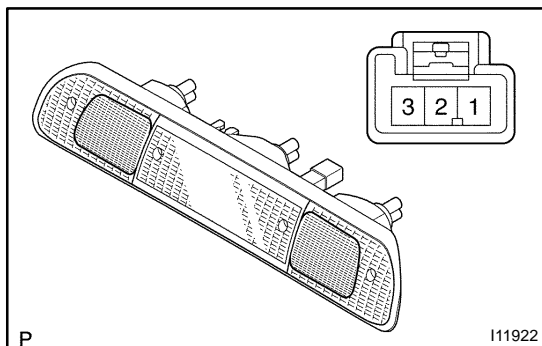

2. INSPECT CARGO LIGHT ASSEMBLY CONTINUITY

Using an ohmmeter, check that continuity exists between terminals 3 and 2.

If the continuity is not as specified, replace the bulb or the stop light assembly.