


INSPECTION

- 1. INSPECT ELECTRO CHROMIC INNER MIRROR OPERATION**
- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (–) lead to terminal 2.
 - (b) Attach a black coloured tape to forward sensor to prevent it from sensing.
 - (c) When the mode is turned to AUTO, check that indicator light lights up.
 - (d) Shine an electric light on the mirror. Check that the mirror surface changes from bright to dark.
- If operation is not as specified, replace the inner mirror.

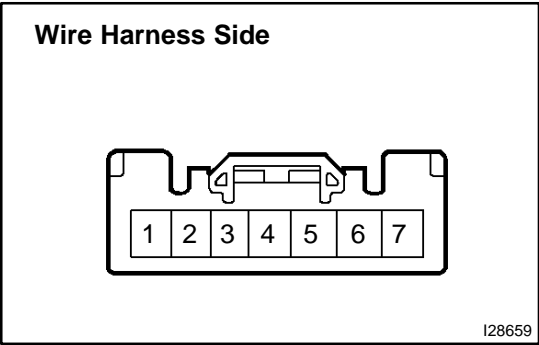

- 2. INSPECT ELECTRO CHROMIC INNER MIRROR CIRCUIT**
- Disconnect the connector from the mirror and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
1 – Ground	Ignition switch LOCK or ACC	No voltage
1 – Ground	Ignition switch ON	Battery positive voltage
2 – Ground	Constant	Continuity

If circuit is not as specified, inspect the circuits connected to other parts.