


INSPECTION

1. INSPECT GARAGE DOOR OPENER

Press the switch and check that indicator turns on.

Even if only one switch cannot turn on an indicator, replace the door opener.

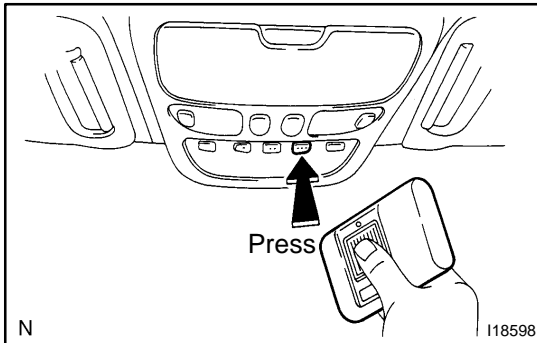


2. INSPECT GARAGE DOOR OPENER REGISTRATION AND TRANSMITTING

HINT:

Use the KENTMORE home link tester and a tester transmitter for this test. First erase the customer's transmitter code, and then register the tester transmitter code.

(a) Check if the tester transmitter code was successfully registered.

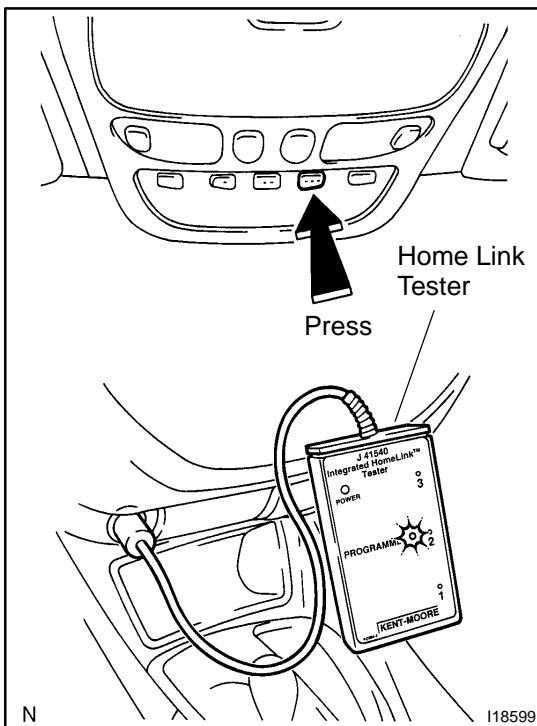

(b) Press the garage door opener switch that was registered to the tester transmitter. Check if the home link tester's green LED illuminates.

HINT:

If the green LED does not illuminate, replace the garage door opener.

(c) When the inspection is complete, re-register the customer's transmitter code(s) again.