


## INSPECTION


### 1. INSPECT MIRROR HEATER SWITCH TIMER OPERATION

- Connect the positive (+) lead from the battery to terminals 2 and 6 of the mirror heater switch and the negative (-) lead to terminal 4.
- Connect the positive (+) lead from the voltmeter to terminal 6 of the mirror heater switch and the negative (-) lead to terminal 4.
- When the switch is OFF, the voltage should be approximately 12 V.

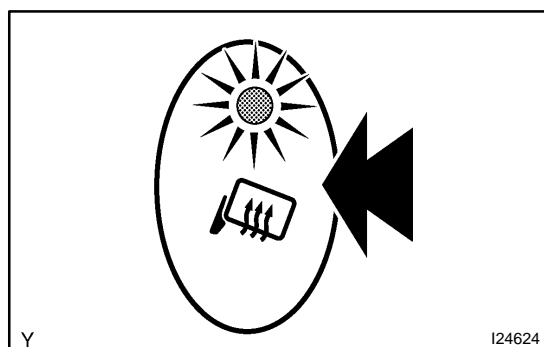

- Push the mirror heater switch on and check that the indicator lights up and that the voltage is less than 1 V.
- After 15 minutes, check that the switch is OFF and the voltage is approximately 12 V.


If the result is not as specified, replace the switch.

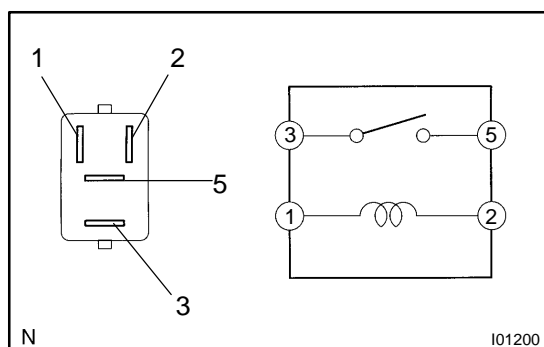

### 2. INSPECT MIRROR HEATER RELAY (Marking : MIR HTR) CONTINUITY

Tester Connection	Specified Condition
3 – 5	No continuity
3 – 5	Continuity (When battery voltage is applied to terminals 1 and 2)

If the continuity is not as specified, replace the relay.

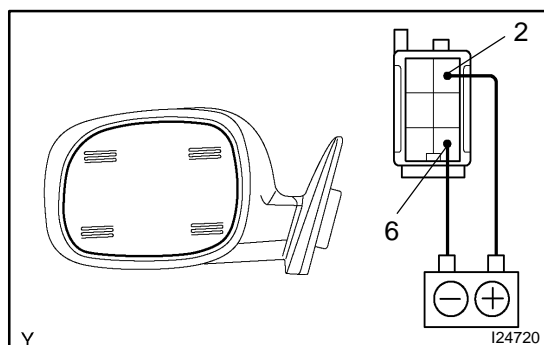

### 3. INSPECT MIRROR HEATER OPERATION

- Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 6.
- Check that the mirror becomes warm.

HINT:

It will take a short time for the mirror to become warm.

If operation is not as specified, replace the mirror.