

INSPECTION

1. Left side: INSPECT MIRROR SWITCH CONTINUITY


Switch Position	Tester Connection	Specified Condition
UP	4 – 8, 6 – 7	Continuity
DOWN	4 – 7, 6 – 8	Continuity
LEFT	5 – 8, 6 – 7	Continuity
RIGHT	5 – 7, 6 – 8	Continuity

If the continuity is not as specified, replace the switch.

2. Right side: INSPECT MIRROR SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
UP	3 – 8, 6 – 7	Continuity
DOWN	3 – 7, 6 – 8	Continuity
LEFT	5 – 8, 6 – 7	Continuity
RIGHT	5 – 7, 6 – 8	Continuity


If the continuity is not as specified, replace the switch.

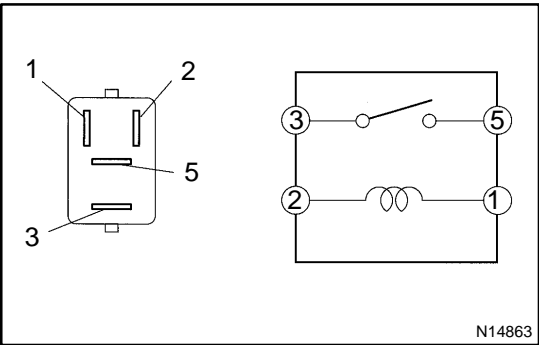

3. 2UZ-FE: INSPECT ACC CUT RELAY CONTINUITY

Tester Connection	Specified Condition
3 – 5	No continuity
3 – 5	Continuity (When battery voltage is applied to terminals 1 and 2)


If the continuity is not as specified, replace the relay.

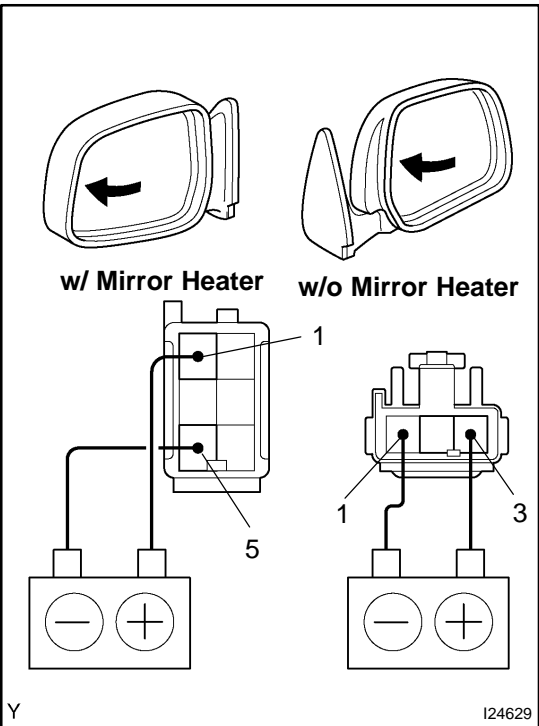


4. INSPECT MIRROR MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 1 (3) and the negative (–) lead to terminal 5 (1). Check that the mirror turns to the left.


(): w/o Mirror heater.

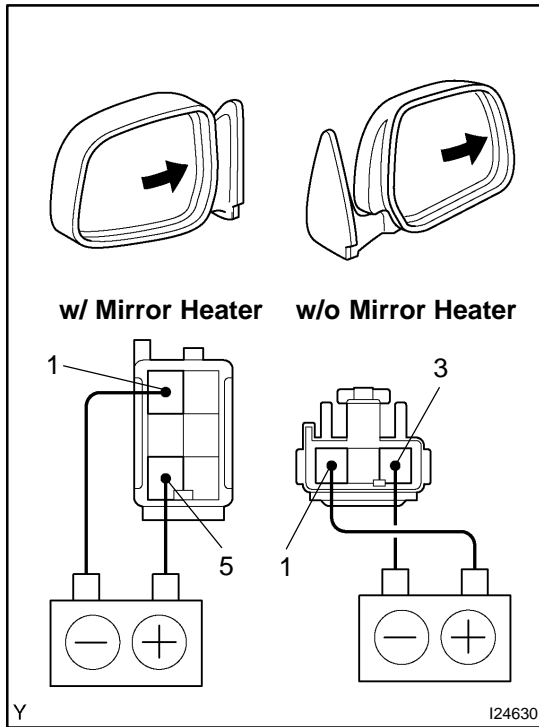

- (b) Reverse the polarity, check that the mirror turns to the right.

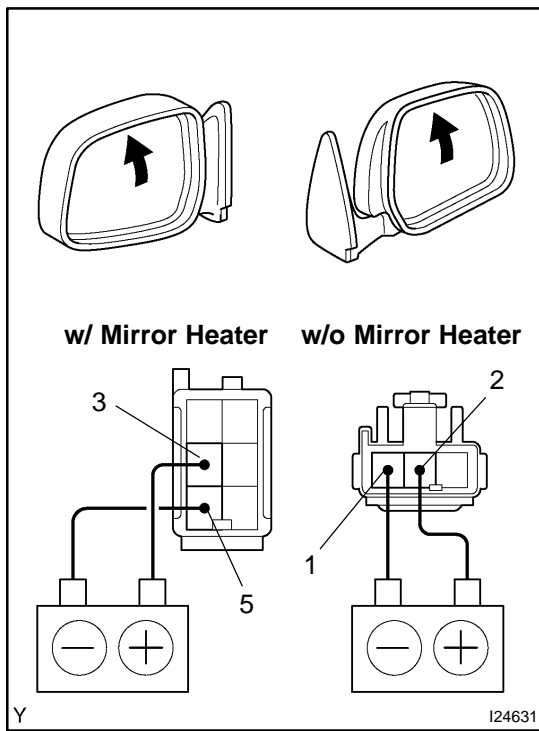

- (c) Connect the positive (+) lead from the battery to terminal 3 (2) and the negative (-) lead to terminal 5 (1). Check that the mirror turns upward.
(): w/o Mirror heater.

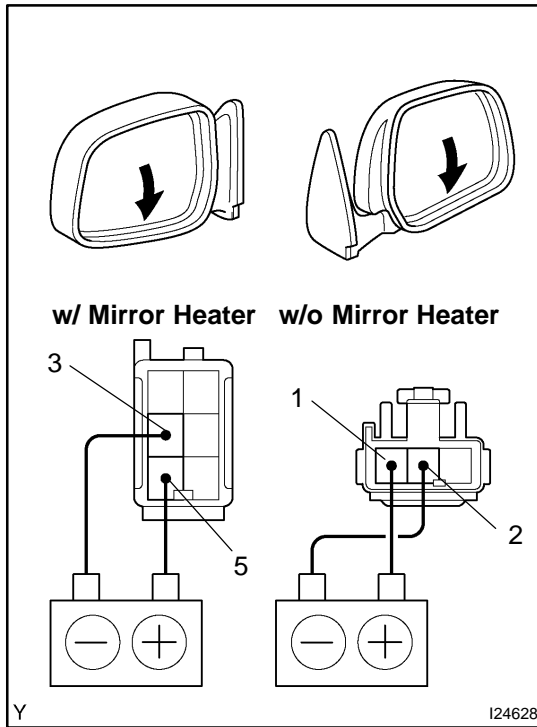

- (d) Reverse the polarity, and check that the mirror turns downward.
If operation is not as specified, replace the mirror assembly.