



POWER SOURCE (Except Double Cab) LOCATION

BE2JZ-02

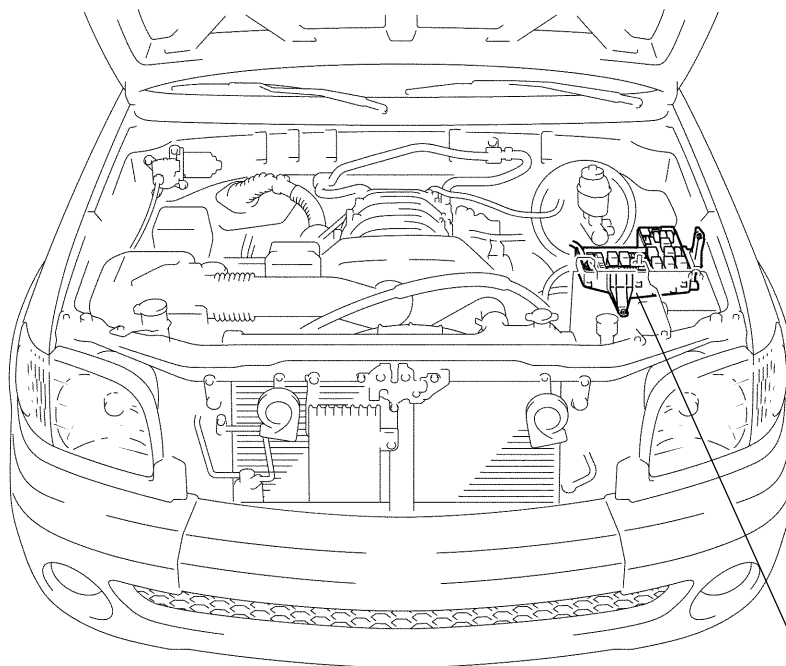


Engine Room R/B

Driver Side J/B
● Integration Relay

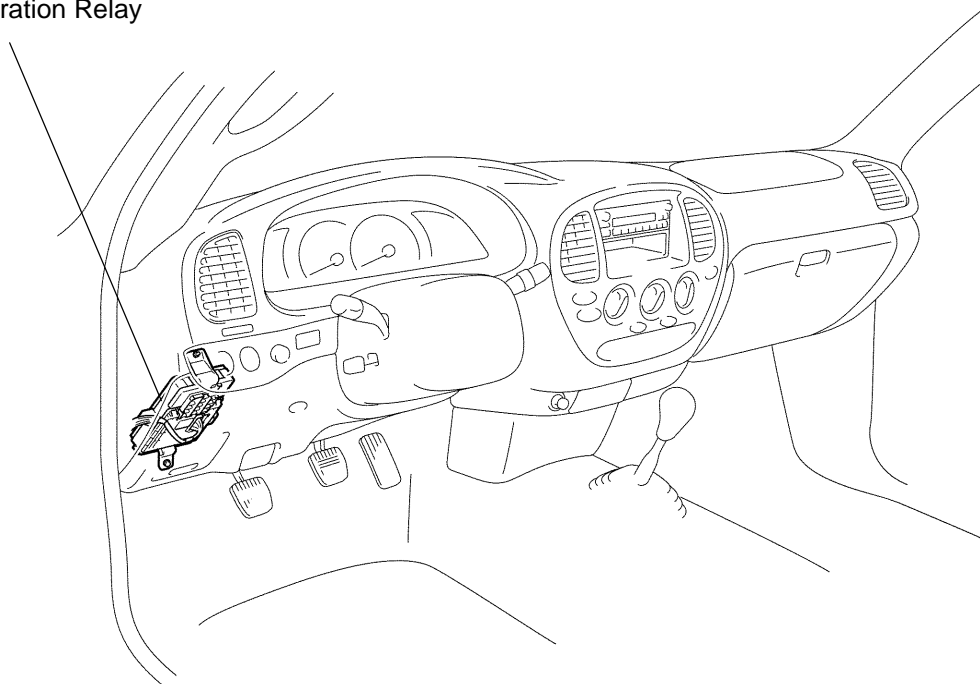

Engine Room R/B

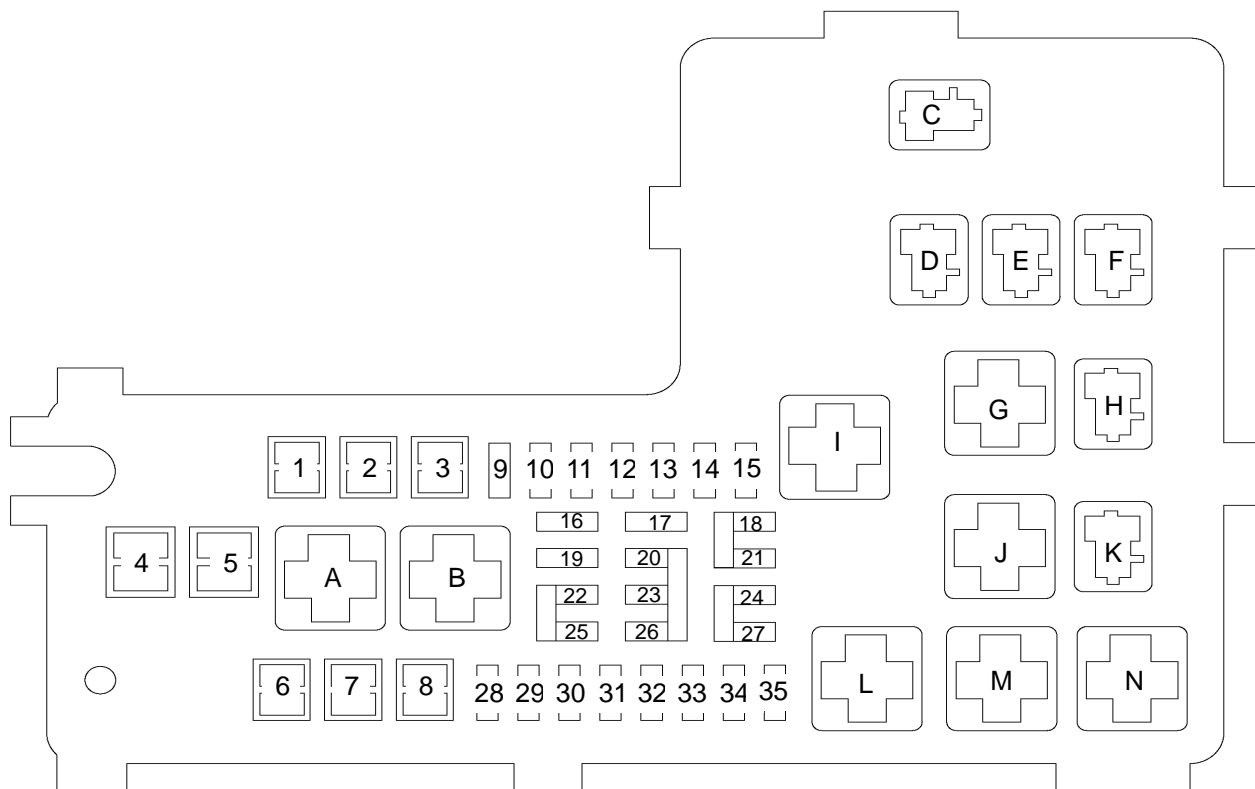

Fuses

1: ABS2 M-fuse	50 A
2: ABS3 M-fuse	50 A
3: ST3 M-fuse	30 A
4: ALT H-fuse*1	140 A
ALT H-fuse*2	100 A
5: –	
6: AM1 M-fuse	40 A
7: HTR M-fuse	50 A
8: J/B M-fuse	50 A
9: ALT-S Fuse	7.5 A
10: ETCS Fuse	15 A
11: HAZ Fuse	15 A
12: EFI NO. 1 Fuse	20 A
13: AM2 Fuse	30 A
14: TOWING Fuse	30 A
15: SHORT PIN	–
16: A/C Fuse	10 A
17: –	
18: HEAD LL Fuse	10 A
19: EFI NO. 2 Fuse	10 A

20: RADIO Fuse	20 A
21: HEAD RL Fuse	10 A
22: PWR OUTLET2 Fuse	15 A
23: DOME Fuse	10 A
24: H-LP LH Fuse	10 A
25: PWR OUTLET1 Fuse	15 A
26: ECU-B Fuse	5 A
27: H-LP RH Fuse	10 A
28: MIR HTR Fuse	15 A
29: FOG Fuse	15 A
30: TOW BRK Fuse	30 A
31: SUB BATT Fuse	30 A
32: TOW TAIL Fuse	30 A
33: –	
34: –	
35: –	

Relays


A: DRL NO. 4 Relay
B: DIMMER Relay
C: ST Relay
D: F/PMP Relay
E: C/OPN Relay
F: EFI Relay
G: TOW TAIL Relay
H: ABS SOL Relay
I: H-LP Relay
J: SUB BATT Relay
K: MIR HTR Relay
L: POWER OUTLET Relay
M: FOG Relay
N: HEATER Relay

*1: Towing Package

*2: Except Towing Package

Driver Side J/B


w/ Daytime Running Light

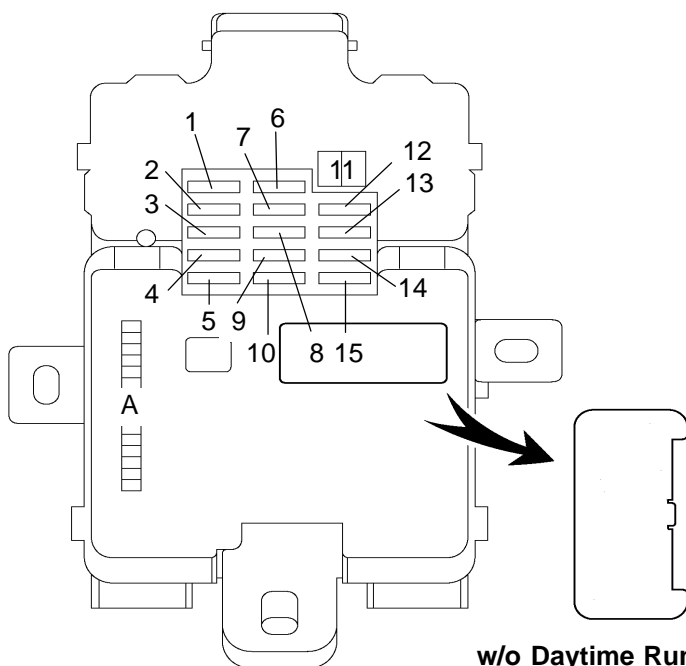

Fuses

1: -	
2: WIP Fuse	20 A
3: TURN Fuse	5 A
4: ECU-IG Fuse	5 A
5: 4WD Fuse	20 A
6: ACC Fuse	15 A
7: GAUGE Fuse	10 A
8: IGN Fuse	5 A
9: CARGO LP Fuse	5 A
10: TAIL Fuse	15 A
11: POWER M-fuse* ¹	30 A
12: OBD Fuse	7.5 A
13: HORN Fuse	10 A
14: STA Fuse	5 A
15: STOP Fuse	15 A

w/o Daytime Running Light

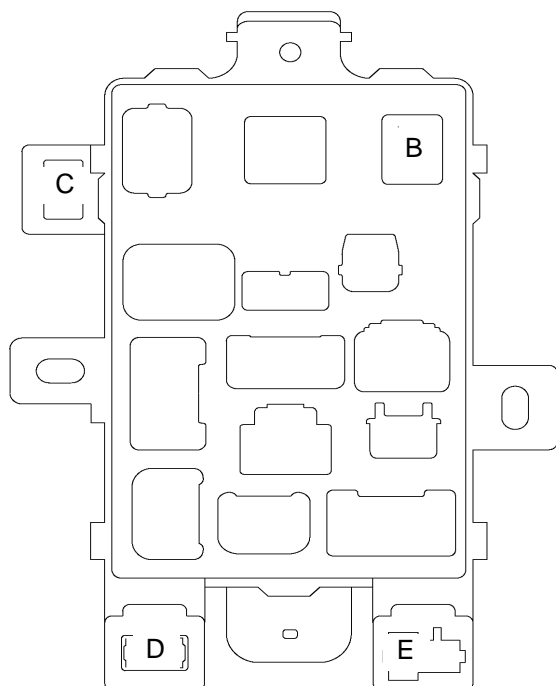

Relays

- A: Integration Relay
- B: POWER Relay
- C: ACC CUT Relay
- D: Turn Signal Flasher
- E: BACK-UP LIGHT Relay*²

*¹: Towing Package

*²: A/T