

# POWER WINDOW CONTROL SYSTEM (Double Cab)

## LOCATION

BE2LE-01

Instrument Panel J/B

- PWR NO. 1 Fuse
- PWR NO. 2 Fuse
- PWR NO. 3 Fuse
- PWR NO. 4 Fuse
- POWER MAIN Relay

Body ECU

(Located behind the Instrument Panel)

Power Window Regulator Switch  
(Front Passenger Door ECU)Power Window Master Switch  
(Driver Door ECU)Power Window Regulator Assembly  
● Power Window MotorPower Window Regulator Assembly  
● Power Window Motor

Power Window Regulator Switch