

SEAT HEATER SYSTEM (Double Cab)

LOCATION

BE2KJ-01

Instrument Panel J/B

- SEAT HTR Fuse

Seat Heater Switch

Ignition Switch

Driver Side R/B

- SEAT HEATER Relay

Seatback Heater

Seat Cushion Heater