

## DISASSEMBLY

### HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

#### 1. REMOVE DOOR INSIDE HANDLE BEZEL

- Remove the screw.
- Using a screwdriver, remove the door inside handle bezel.

### HINT:

Tape the screwdriver tip before use.

#### 2. REMOVE DOOR ARMREST


- Remove the screw.
- Using a screwdriver, remove the door armrest.

### HINT:

Tape the screwdriver tip before use.

#### 3. REMOVE ACCESS DOOR TRIM

- Release the quarter window lock.

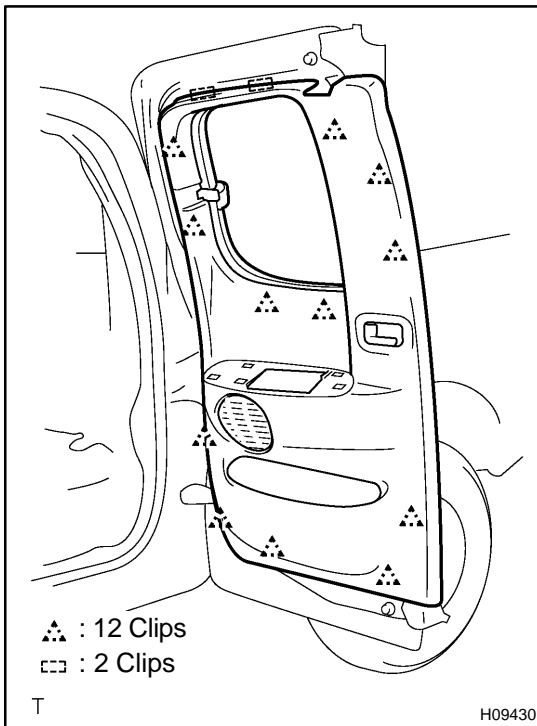

- Insert a screwdriver between the door trim and door panel to remove the door trim.

### HINT:

Tape the screwdriver tip before use.

#### 4. REMOVE DOOR ARMREST BASE


Remove the 2 screws and door armrest base.

#### 5. REMOVE SPEAKER

- Disconnect the connector.
- Remove the 4 screws and speaker.

#### 6. REMOVE DOOR INSIDE HANDLE

- Remove the screw and slide the inside handle forward.

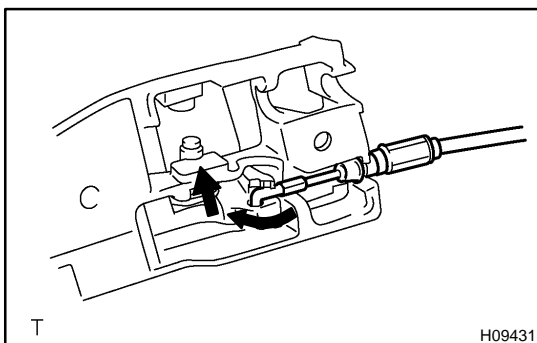


- Disconnect the cable as shown in the illustration.

#### 7. REMOVE SERVICE HOLE COVER

- Disconnect the connector.
- Remove the service hole cover.

### HINT:


Bring out the cable and connector through the service hole cover.

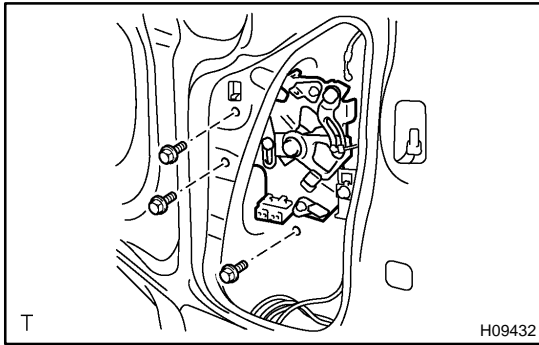**8. REMOVE ACCESS DOOR CONTROLLER**

- (a) Disconnect the 2 cables and 2 links.
- (b) Disengage the 2 clamps.
- (c) Remove the 3 bolts and access door controller.

**9. REMOVE LOWER DOOR LOCK**

- (a) Disconnect the connector.

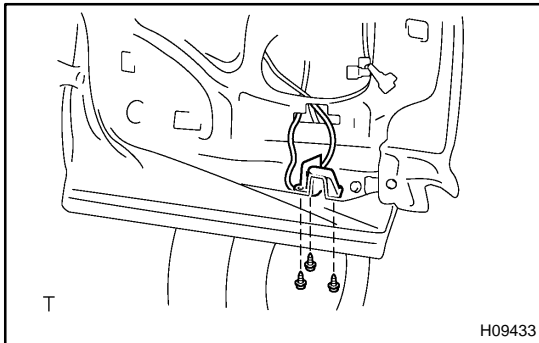


- (b) Using a torx® socket wrench, remove the 3 torx® screws and lower door lock.

**Torx® socket wrench:**

**T30 (Part No. 09042-00010 or locally manufactured tool)**

**10. REMOVE UPPER DOOR LOCK**


- (a) Disconnect the connector.

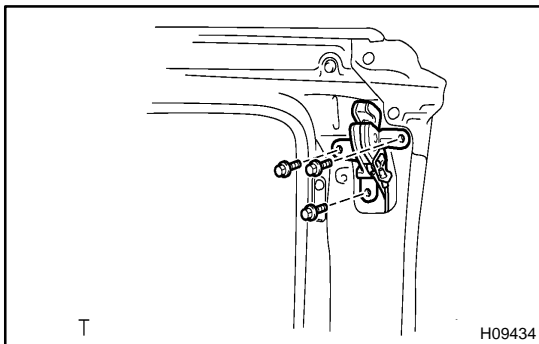

- (b) Remove the 3 bolts and upper door lock.

**11. REMOVE OUTSIDE HANDLE**


Remove the 2 bolts and outside handle.

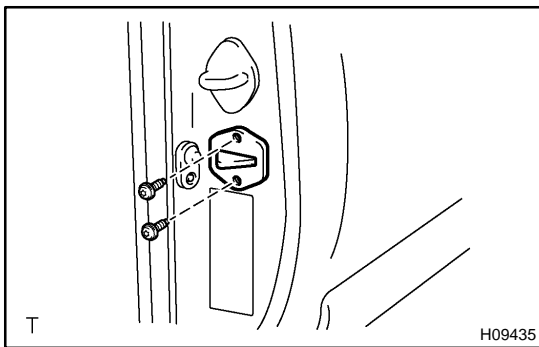**12. REMOVE CANCEL LEVER**

Using a torx® socket wrench, remove the 2 torx® screws and cancel lever.

**Torx® socket wrench:**


**T30 (Part No. 09042-00010 or locally manufactured tool)**

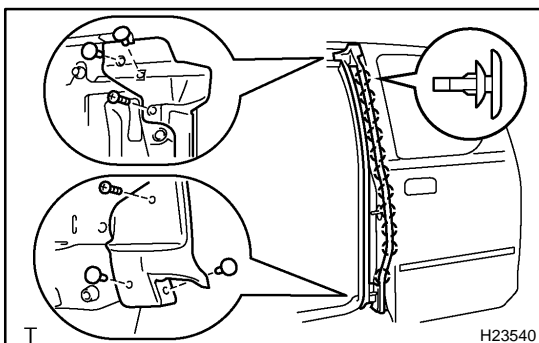**13. REMOVE OUTER WEATHERSTRIP**

- (a) Remove the 2 screws and 4 clips.
- (b) Using a clip remover, remove the outer weatherstrip.

**14. REMOVE INNER WEATHERSTRIP**

Using a clip remover, remove the inner weatherstrip.

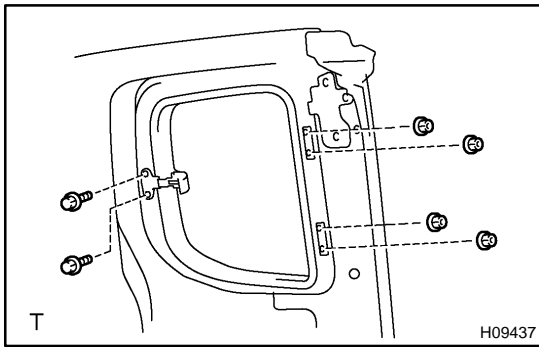**15. REMOVE QUARTER WINDOW AND WEATHERSTRIP**

- (a) Remove the 2 bolts, 4 nuts and quarter window.
- (b) Remove the weatherstrip.

**16. REMOVE QUARTER WINDOW LOCK AND HINGES**

- (a) Remove the screws and window lock from the quarter window.
- (b) Remove the 2 screws and 2 hinges from the quarter window.