

DISASSEMBLY


CAUTION:

Wear safety gloves, because the sharp edges and surfaces of the seat frame may cause injury to the hands.

HINT:

- The procedures listed below are for the LH side.
- Tape the screwdriver tip before using it to remove the parts.

1. REMOVE HEADREST

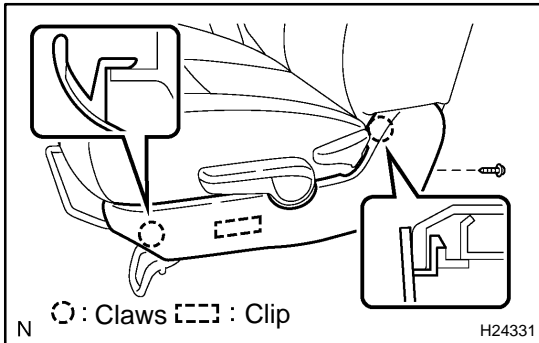


2. REMOVE SEAT CUSHION OUTER SHIELD

- Remove the screw from the seat cushion outer shield.
- Using a screwdriver, remove the seat cushion outer shield.

HINT:

Tape the screwdriver tip before use.

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE

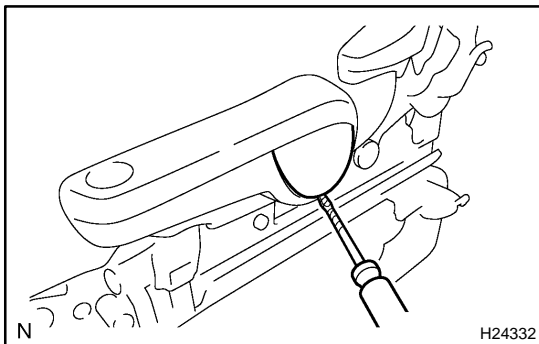


4. REMOVE VERTICAL ADJUSTER HANDLE


- Using a screwdriver, remove the vertical adjuster handle cap.

HINT:

Tape the screwdriver tip before use.

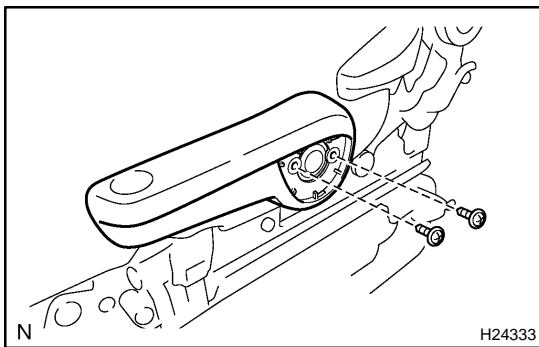

- Remove the 2 screws and the vertical adjuster handle.

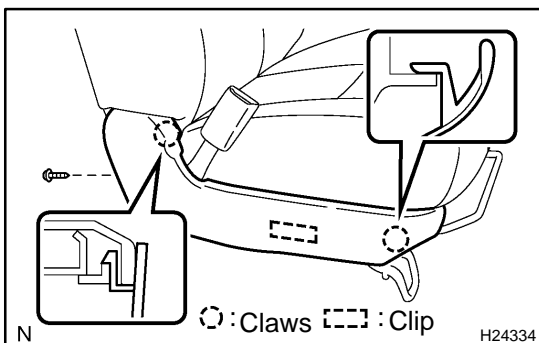

5. REMOVE SEAT CUSHION INNER SHIELD


- Remove the screw from the seat cushion inner shield.
- Using a screwdriver, remove the seat cushion inner shield.

HINT:


Tape the screwdriver tip before use.

6. REMOVE FRONT SEAT INNER BELT


- Disconnect the wire harness clamps and connectors.
- Remove the nut and front seat inner belt.

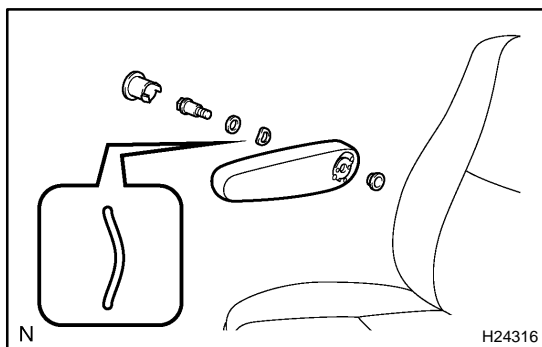**7. REMOVE ARMREST ASSEMBLY**


- (a) Using a screwdriver, remove the armrest cap.
- (b) Remove the bolt, armrest spacer, armrest lock plate and armrest assembly.
- (c) Remove the spacer from the armrest assembly.

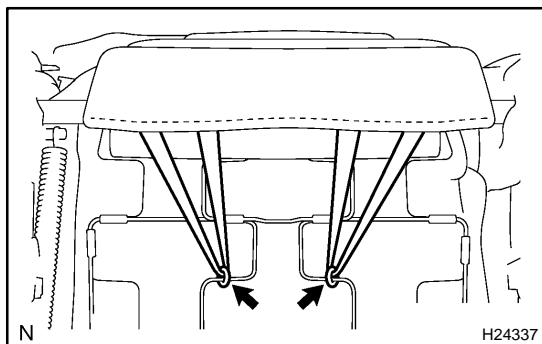**8. REMOVE SEATBACK COVER AND PAD**


- (a) Remove the hog rings from the seat frame assembly.
- (b) Open the fastener.

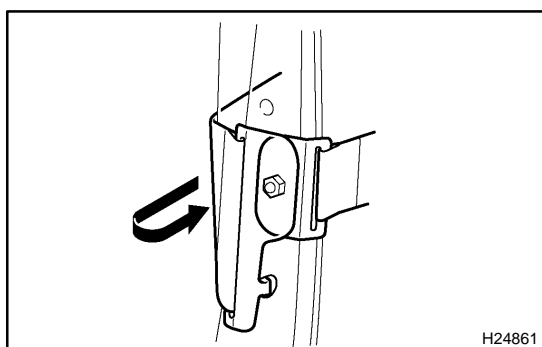


- (c) w/ Side airbag:
Remove the nut and disconnect the seatback cover bracket from the seat frame assembly.

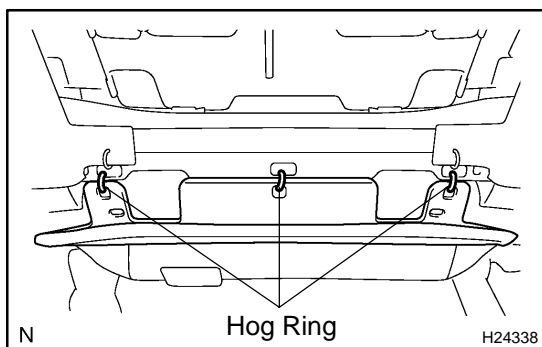


- (d) Remove the hog rings shown in the illustration from the seat frame assembly.

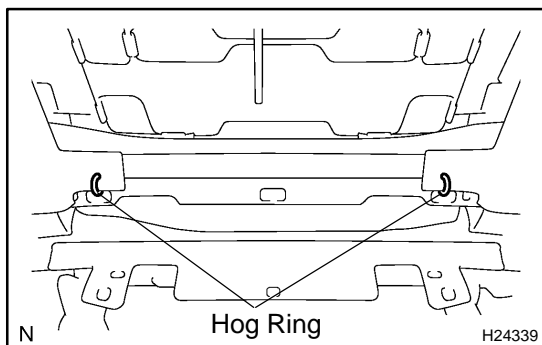


- (e) Remove the hog rings shown in the illustration from the seat frame assembly.
- (f) Remove the seatback cover and pad from the seat frame assembly.

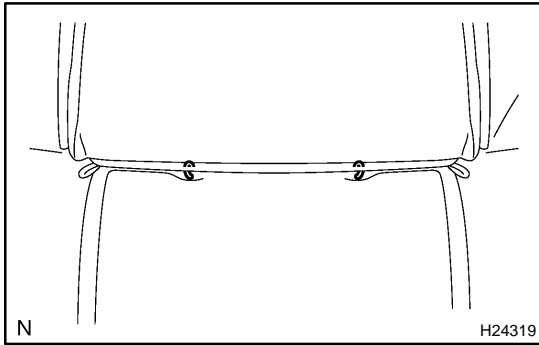**9. REMOVE SEATBACK COVER**


- (a) Turn up the seatback cover and remove the hog rings.
- (b) Remove the 2 headrest supports.
- (c) Remove the seatback cover from the seatback pad.

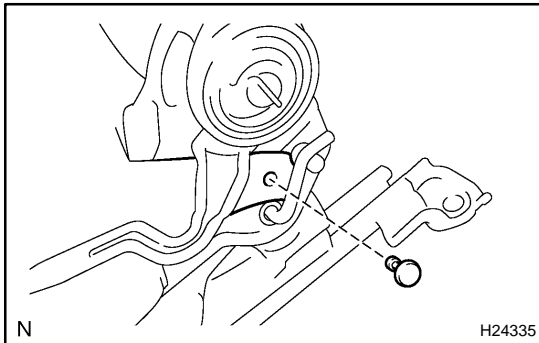**10. REMOVE SEAT CUSHION COVER AND PAD**


- (a) Remove the clip.
- (b) Perform the same procedure on the other side.

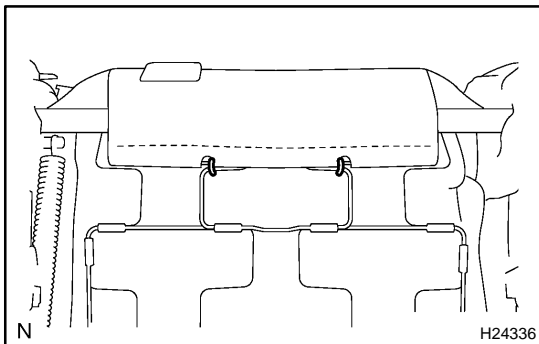


- (c) Remove the hog rings from the seat cushion cover.
- (d) Unlatch the seat cushion cover hooks, then remove the seat cushion cover with seat cushion pad.

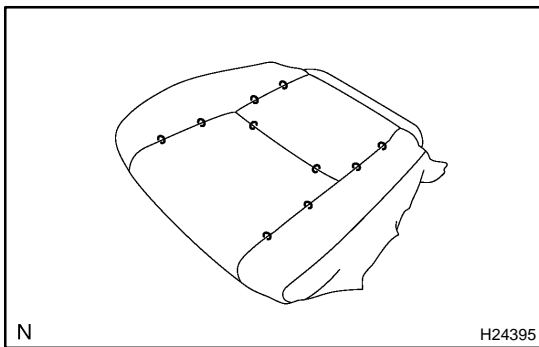**11. REMOVE SEAT CUSHION COVER**


Remove the hog rings and seat cushion cover from the seat cushion pad.

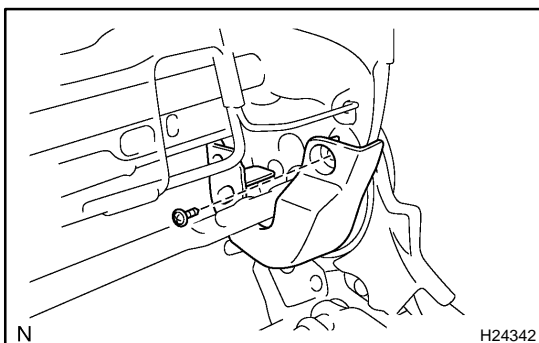**12. REMOVE RH AND LH UPPER RECLINING ADJUSTER INSIDE COVERS**

- (a) Remove the screw and LH upper reclining adjuster inside cover.
- (b) Perform the same procedure on the other side.

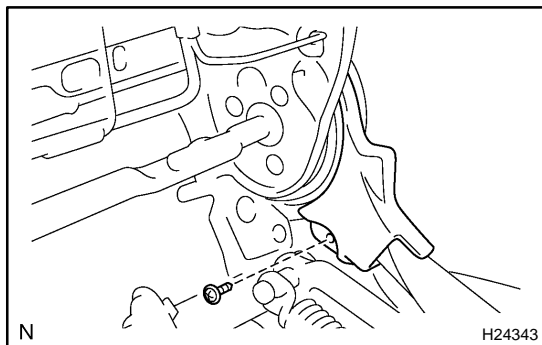**13. REMOVE RH AND LH LOWER RECLINING ADJUSTER INSIDE COVERS**

- (a) Remove the screw and LH lower reclining adjuster inside cover.
- (b) Perform the same procedure on the other side.

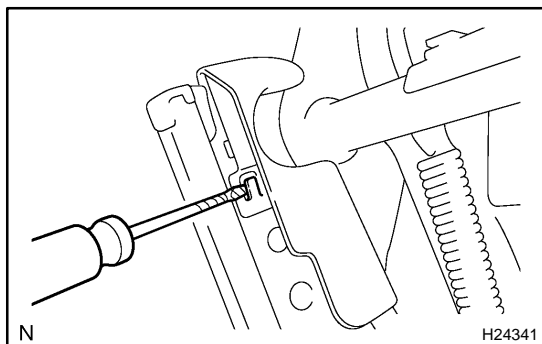**14. REMOVE RH AND LH SEAT CUSHION LOWER SHIELDS**

- (a) Using a screwdriver, disengage the claw and remove the LH seat cushion lower shield.

HINT:

Tape the screwdriver tip before use.

- (b) Perform the same procedure on the other side.

15. Driver's seat:**REMOVE SEAT POSITION SENSOR**

(See page [RS-118](#))