

DISASSEMBLY


CAUTION:

Wear safety gloves, because the sharp edges and surfaces of the seat frame may cause injury to the hands.

HINT:

- Tape the screwdriver tip before using it to remove the parts.
- For easy removal of the lumbar support adjuster, release the lumbar support through lumbar switch operation.

1. REMOVE HEADREST

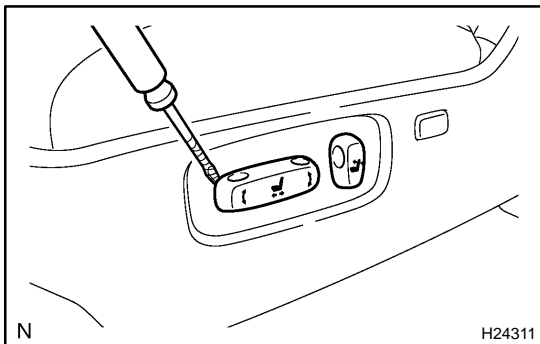


2. REMOVE SLIDE KNOB AND RECLINING KNOB

Using a screwdriver, remove the slide knob and reclining knob.


HINT:

Tape the screwdriver tip before use.

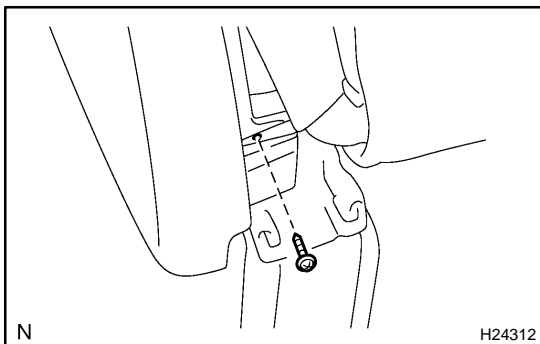


3. REMOVE SEAT CUSHION LOWER SHIELD, SEAT CUSHION OUTER SHIELD AND SEAT CUSHION INNER SHIELD


- (a) Remove the screw from the seat cushion outer shield.
- (b) Perform the same procedure on the seat cushion inner shield.

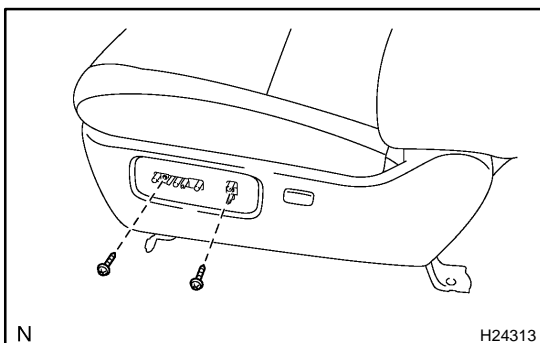

- (c) Remove the 2 screws from the seat cushion outer shield.
- (d) Remove the screw from the seat cushion inner shield.

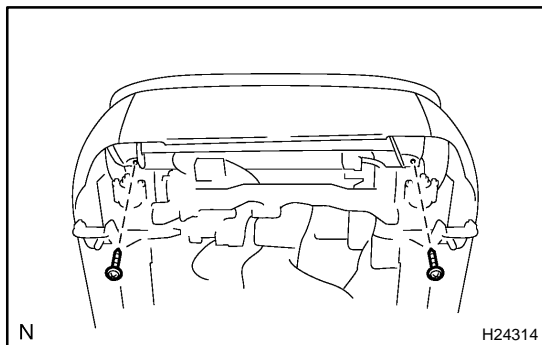

- (e) Remove the 2 screws from the seat cushion lower shield.
- (f) Disconnect the lumbar switch connector from the seat cushion outer shield, and remove the seat cushion lower shield, outer shield and inner shield.

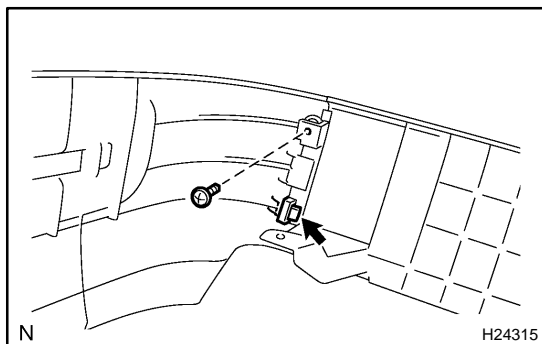

- (g) Remove the screw and separate the seat cushion lower shield and seat cushion outer shield.
- (h) Perform the same procedure on the other side.

4. REMOVE FRONT SEAT INNER BELT


- (a) Disconnect the wire harness clamps and connectors.
- (b) Remove the nut and front seat inner belt.

5. REMOVE LUMBAR SWITCH

Remove the 2 screws and lumbar switch from the seat cushion outer shield.


6. REMOVE POWER SEAT SWITCH

Remove the 3 screws and power seat switch.

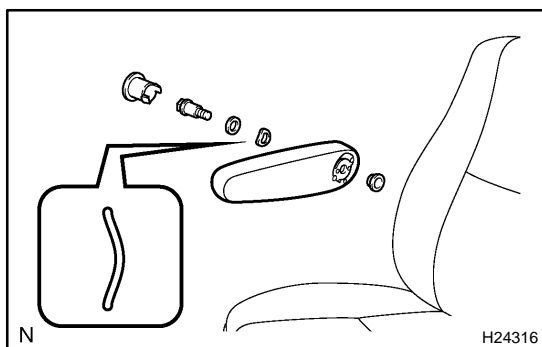


7. REMOVE ARMREST ASSEMBLY

- (a) Using a screwdriver, remove the armrest cap.
- (b) Remove the bolt, armrest spacer, armrest lock plate and armrest assembly.
- (c) Remove the spacer from the armrest assembly.

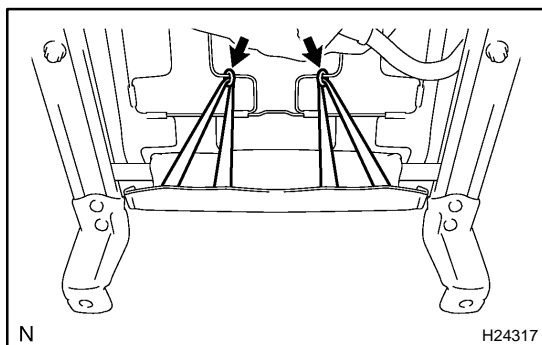


8. REMOVE SEATBACK COVER AND PAD


- (a) Remove the hog rings from the seat frame assembly.
- (b) Open the fastener.

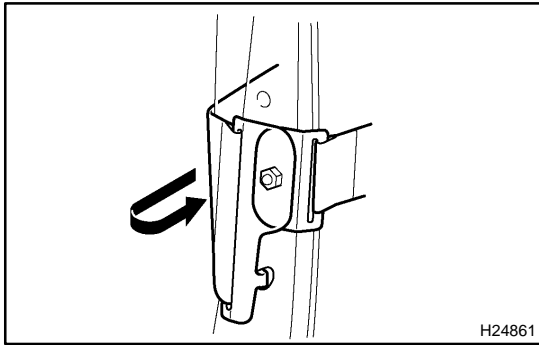


- (c) w/ Side airbag:
Remove the nut and disconnect the seatback cover bracket from the seat frame assembly.

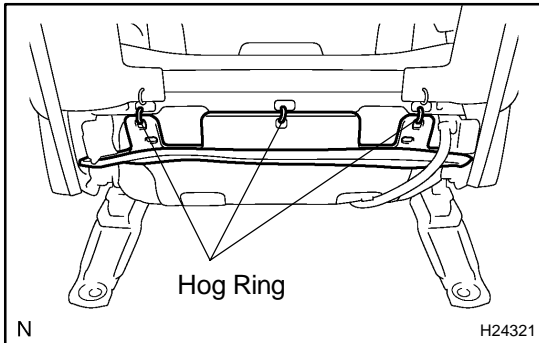

- (d) Remove the hog rings from the seat frame assembly.

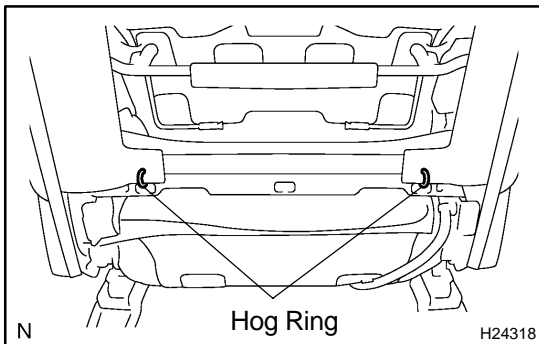

- (e) Remove the hog rings from the seat frame assembly.
(f) Remove the seatback cover and pad from the seat frame assembly.

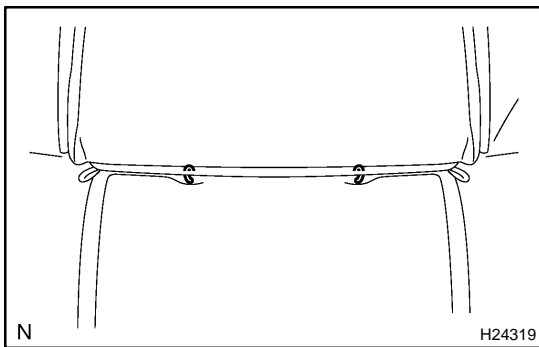

9. REMOVE SEATBACK COVER

- (a) Turn up the seatback cover and remove the hog rings.
(b) Remove the 2 headrest supports.
(c) Remove the seatback cover from the seatback pad.


10. w/ Seat heater:


REMOVE SEATBACK HEATER ASSEMBLY

Cut off the tack pins which fasten the seat heater, and then remove the seatback heater assembly from the seatback cover.


11. REMOVE SEAT CUSHION COVER AND PAD

- (a) Disconnect the wire harness clamp.
(b) Remove the 2 clips.

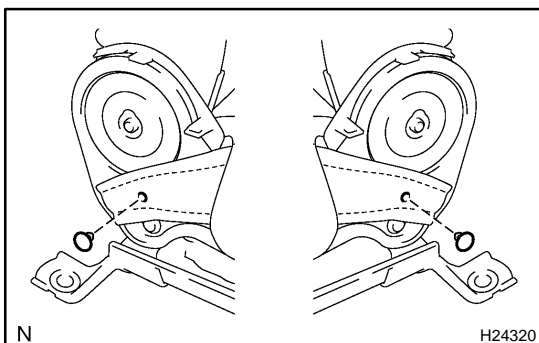

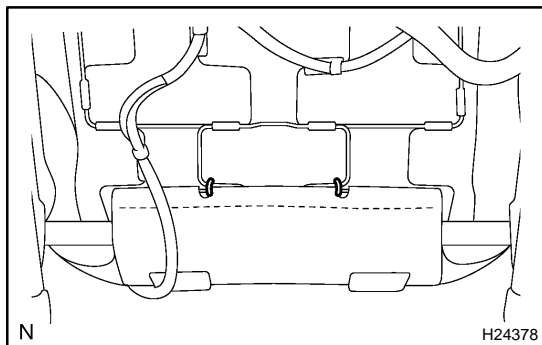

- (c) Remove the hog rings from the seat cushion cover.
- (d) Unlatch the seat cushion cover hooks, then remove the seat cushion cover and seat cushion pad.

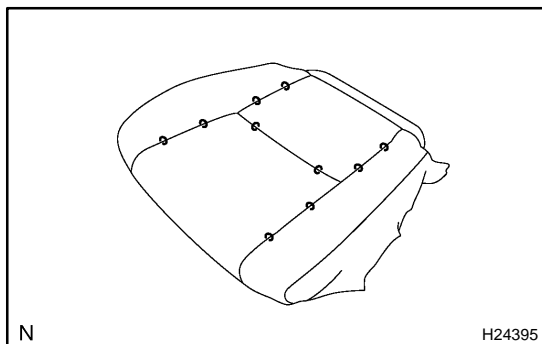


12. REMOVE SEAT CUSHION COVER

Remove the hog rings and seat cushion cover from the seat cushion pad.

13. w/ Seat heater:

REMOVE SEAT CUSHION HEATER ASSEMBLY

Cut off the tack pins which fasten the seat heater, and then remove the seat cushion heater assembly from the seat cushion cover.

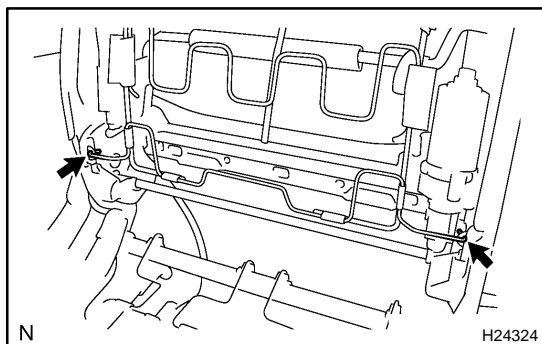


14. REMOVE LUMBAR SUPPORT ADJUSTER


- (a) Disconnect the connector.
- (b) Disengage the seatback spring edge from the seat frame assembly.

NOTICE:

Be careful when releasing the seatback spring edge, because there is a possibility that the spring may break due to tension by the lumbar support.

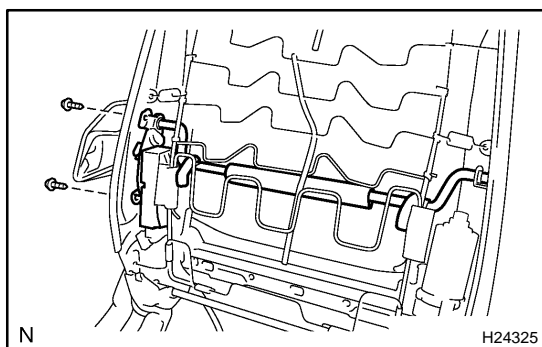


- (c) Remove the 2 screws and lumbar support adjuster.
- (d) Remove the bushing from the lumbar support adjuster.

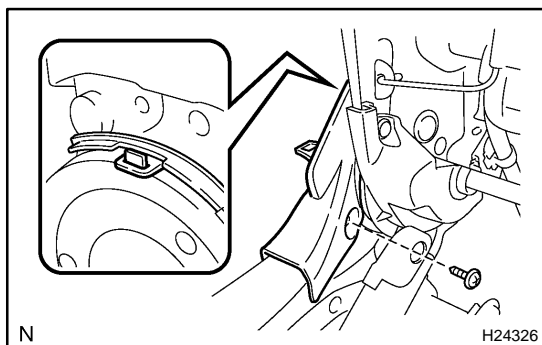

15. REMOVE RH AND LH RECLINING ADJUSTER INSIDE COVERS

- (a) Remove the screw and RH reclining adjuster inside cover.
- (b) Disconnect the wire harness clamp.
- (c) Perform the same procedure on the other side.

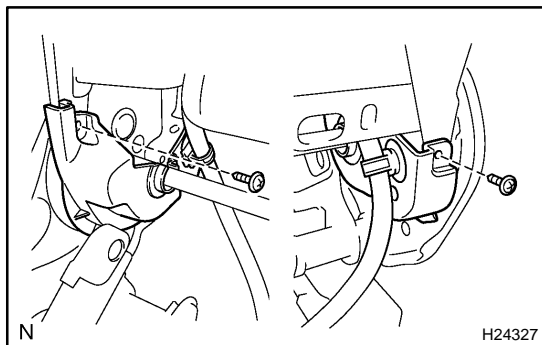**16. REMOVE RH AND LH SEATBACK SHIELDS**

- (a) Remove the 2 screws and RH seatback shield.
- (b) Perform the same procedure on the other side.

17. REMOVE VERTICAL ADJUSTER BRACKET INNER AND OUTER COVERS

- (a) Remove the screw and vertical adjuster bracket inner cover.
- (b) Perform the same procedure on the other side.

18. REMOVE SEAT POSITION SENSOR

(See page [RS-118](#))