

## DISASSEMBLY


### CAUTION:

Wear safety gloves, because the sharp edges and surfaces of the seat frame may cause injury to the hands.

### HINT:

Tape the screwdriver tip before using it to remove the parts.

#### 1. REMOVE HEADREST

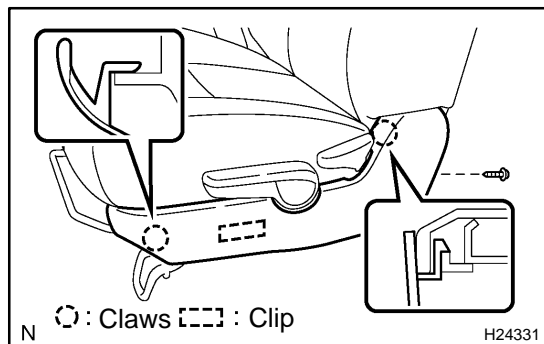


#### 2. REMOVE SEAT CUSHION OUTER SHIELD

- Remove the screw from the seat cushion outer shield.
- Using a screwdriver, remove the seat cushion outer shield.

### HINT:

Tape the screwdriver tip before use.

#### 3. REMOVE RECLINING ADJUSTER RELEASE HANDLE

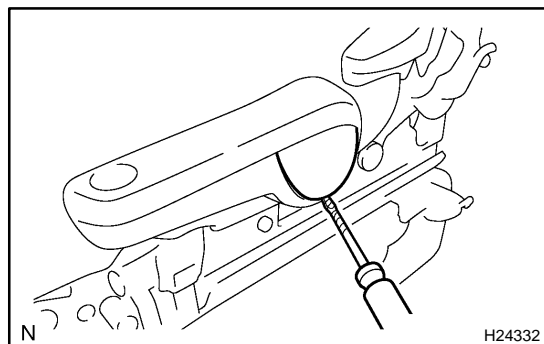


#### 4. REMOVE VERTICAL ADJUSTER HANDLE


- Using a screwdriver, remove the vertical adjuster handle cap.

### HINT:

Tape the screwdriver tip before use.

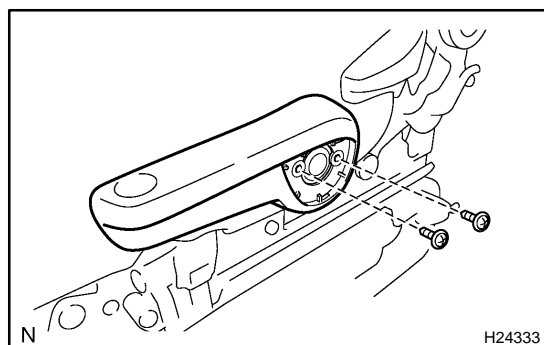

- Remove the 2 screws and the vertical adjuster handle.

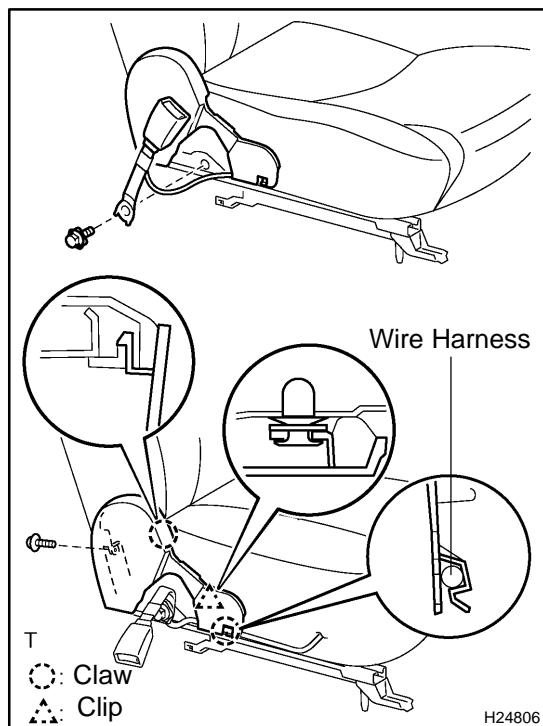
**5. REMOVE SEAT CUSHION INNER SHIELD**

- (a) Remove the bolt and front seat inner belt.
- (b) Remove the screw from the seat cushion inner shield.
- (c) Disconnect the front seat inner belt wire harness clamp from the seat cushion inner shield.
- (d) Using a screwdriver, remove the seat cushion inner shield.


**HINT:**

Tape the screwdriver tip before use.


- (e) Disconnect the connectors and clamps, and remove the front seat inner belt.

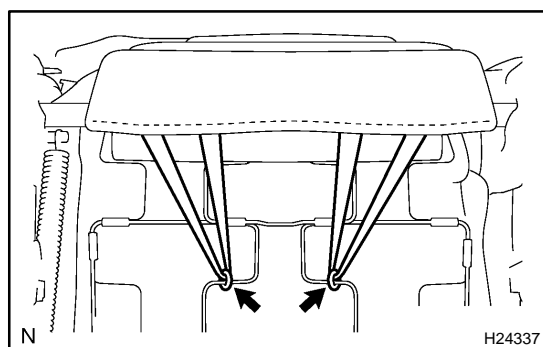**6. REMOVE SEATBACK COVER AND PAD**


- (a) Remove the hog rings from the seat frame assembly.
- (b) Open the fastener.

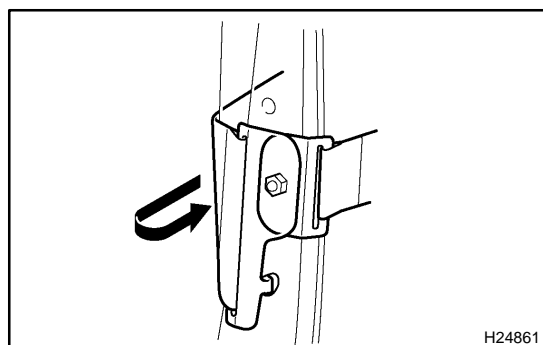


- (c) w/ Side airbag:  
Remove the nut and disconnect the seatback cover bracket from the seat frame assembly.

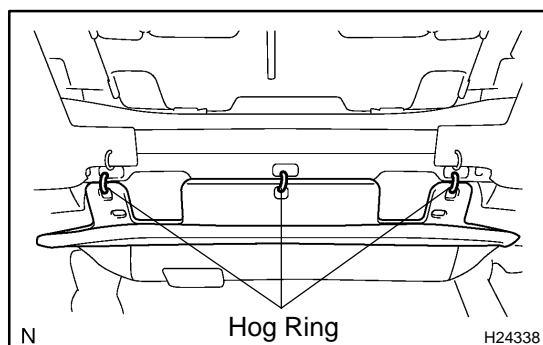

- (d) Remove the hog rings shown in the illustration from the seat frame assembly.

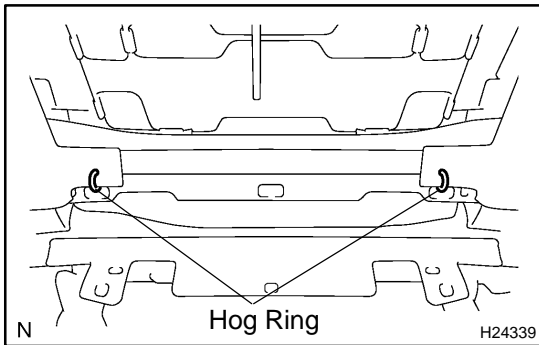


- (e) Remove the hog rings shown in the illustration from the seat frame assembly.
- (f) Remove the seatback cover and pad from the seat frame assembly.

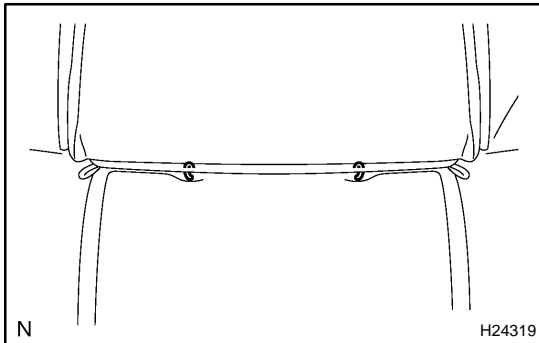


## 7. REMOVE SEATBACK COVER

- (a) Turn up the seatback cover and remove the hog rings.
- (b) Remove the 2 headrest supports.
- (c) Remove the seatback cover from the seatback pad.

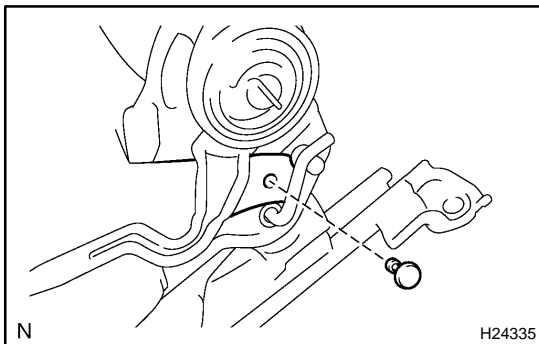


## 8. REMOVE SEAT CUSHION COVER AND PAD

- (a) Remove the clip.
- (b) Perform the same procedure on the other side.

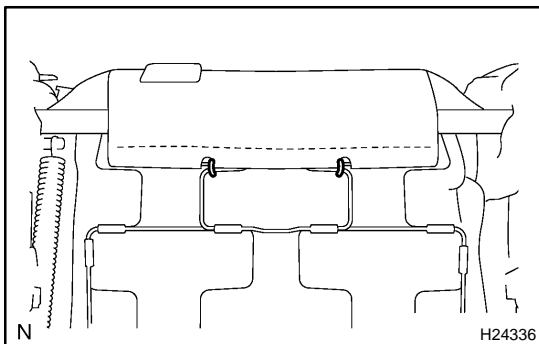


- (c) Remove the hog rings from the seat cushion cover.
- (d) Unlatch the seat cushion cover hooks, then remove the seat cushion cover with seat cushion pad.

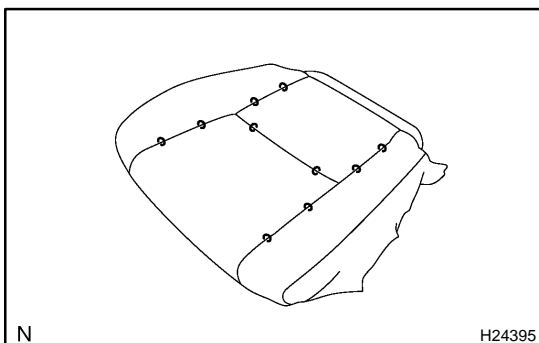


## 9. REMOVE SEAT CUSHION COVER


Remove the hog rings and seat cushion cover from the seat cushion pad.

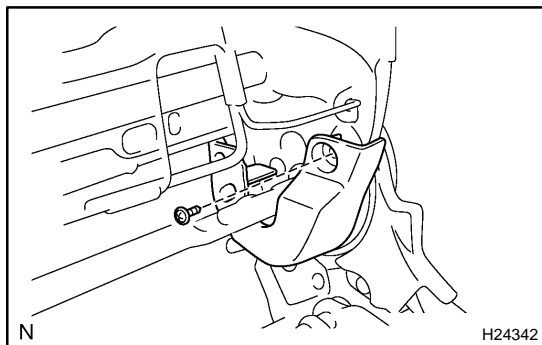**10. REMOVE RH AND LH UPPER RECLINING ADJUSTER INSIDE COVERS**

- (a) Remove the screw and LH upper reclining adjuster inside cover.
- (b) Perform the same procedure on the other side.

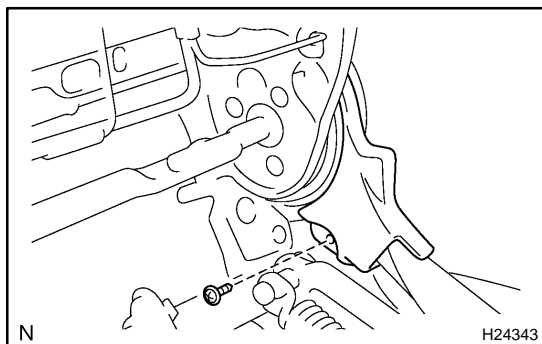**11. REMOVE RH AND LH LOWER RECLINING ADJUSTER INSIDE COVERS**

- (a) Remove the screw and LH lower reclining adjuster inside cover.
- (b) Perform the same procedure on the other side.

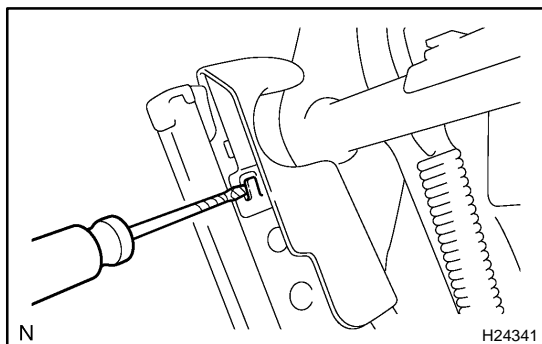**12. REMOVE RH AND LH SEAT CUSHION LOWER SHIELDS**

- (a) Using a screwdriver, disengage the claw and remove the LH seat cushion lower shield.

**HINT:**

Tape the screwdriver tip before use.

- (b) Perform the same procedure on the other side.

**13. REMOVE SEAT POSITION SENSOR  
(See page [RS-118](#))**