

## DISASSEMBLY


### CAUTION:

Wear safety gloves, because the sharp edges and surfaces of the seat frame may cause injury to the hands.

### HINT:

Tape the screwdriver tip before using it to remove the parts.

#### 1. REMOVE HEADRESTS

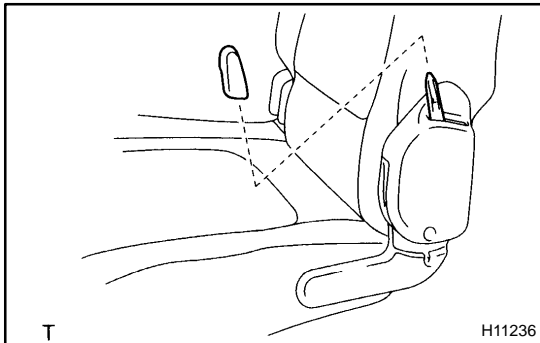


#### 2. REMOVE REAR SEAT LOCK HANDLE

- (a) Using a screwdriver, remove the rear seat lock handle.

### HINT:

Tape the screwdriver tip before use.


- (b) Perform the same procedure on the other side.

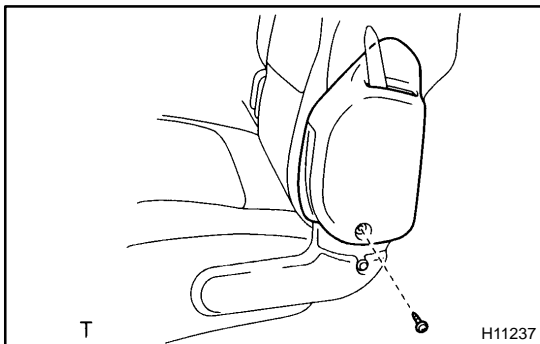

#### 3. REMOVE REAR SEAT LOCK COVER

- (a) Remove the screw and rear seat lock cover.


- (b) Perform the same procedure on the other side.

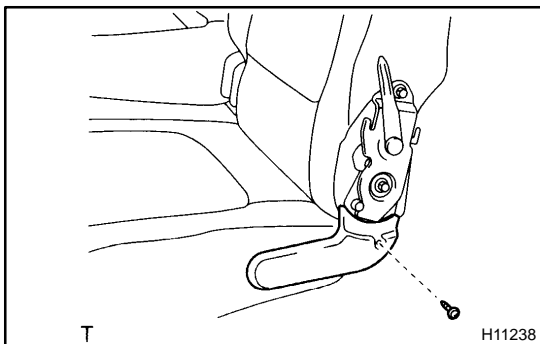

#### 4. REMOVE REAR SEAT CUSHION COVER

- (a) Remove the screw and rear seat cushion cover.

- (b) Perform the same procedure on the other side.

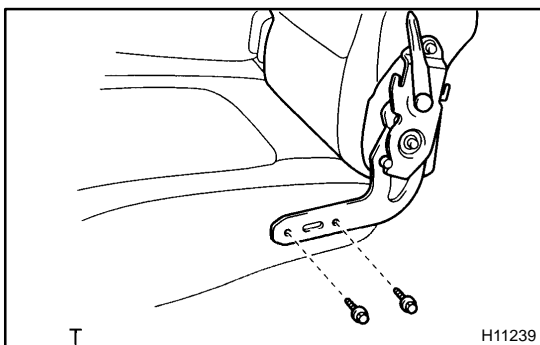


#### 5. REMOVE SEAT CUSHION ASSEMBLY

- (a) Remove the 2 bolts.

- (b) Remove the seat cushion assembly from the seat cushion hinge plate.

- (c) Perform the same procedure on the other side.

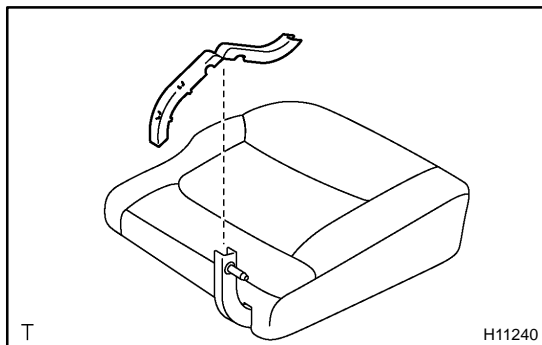


#### 6. REMOVE LH SEAT CUSHION HINGE COVER

Using a screwdriver, remove the LH seat cushion hinge cover.

HINT:

Tape the screwdriver tip before use.

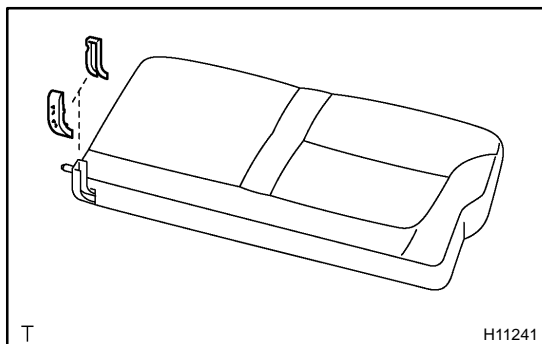


#### 7. REMOVE RH SEAT CUSHION HINGE UPPER AND LOWER COVERS

Using a screwdriver, remove the RH seat cushion hinge upper and lower covers.


HINT:

Tape the screwdriver tip before use.

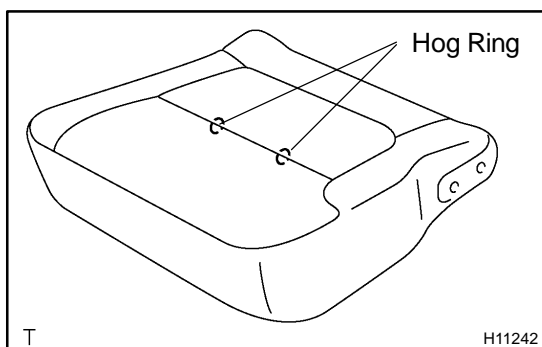

#### 8. REMOVE SEAT CUSHION COVER

- (a) Open the fastener.
- (b) Remove the hog rings and seat cushion cover.
- (c) Perform the same procedure on the other side.

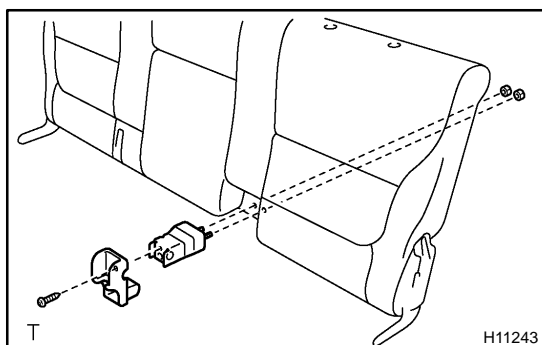

#### 9. REMOVE SEAT CUSHION SIDE COVER

Remove the screw and seat cushion side cover.

#### 10. REMOVE SEAT CUSHION HINGE PLATE


Remove the 2 nuts and seat cushion hinge plate from the seat-back frame.

#### 11. REMOVE SEATBACK ASSEMBLY

Remove the 4 bolts and seatback assembly.

#### 12. REMOVE 4 CRS TETHER ANCHOR BRACKETS


- (a) Remove the bolt and CRS tether anchor bracket.
- (b) Perform the same procedure on the other CRS tether anchors.

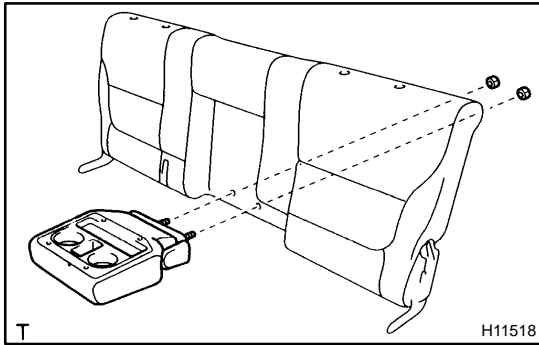**13. REMOVE CENTER ARMREST**

Remove the 2 nuts and center armrest from the seatback assembly.

**14. REMOVE CUP HOLDER**

Remove the 4 screws and cup holder from the center armrest.

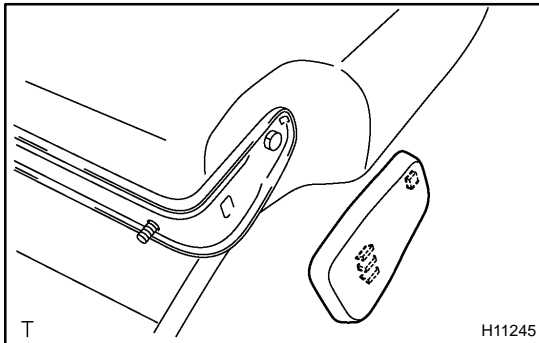
**15. REMOVE CENTER ARMREST HINGE**

(a) Using a screwdriver, remove the center armrest hinge cover.


HINT:

Tape the screwdriver tip before use.


(b) Perform the same procedure on the other side.

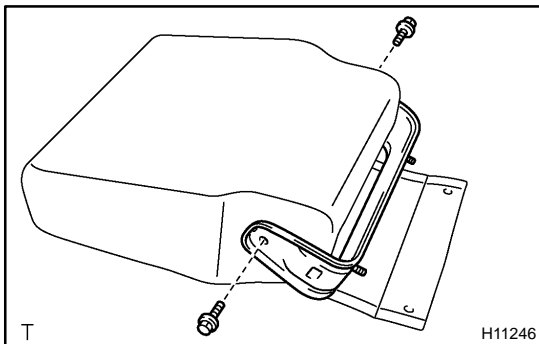

(c) Remove the 2 bolts and center armrest hinge.

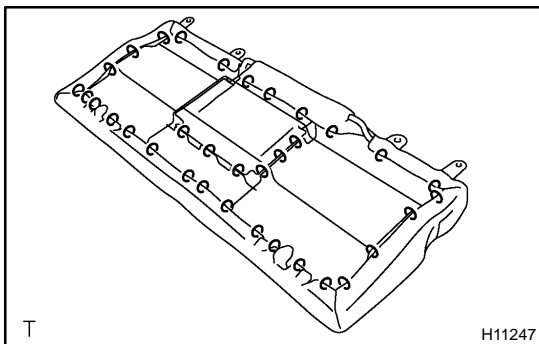**16. REMOVE HEADREST SUPPORTS****17. REMOVE SEATBACK COVER**

(a) Remove the hog rings from the rear side of the seatback assembly.

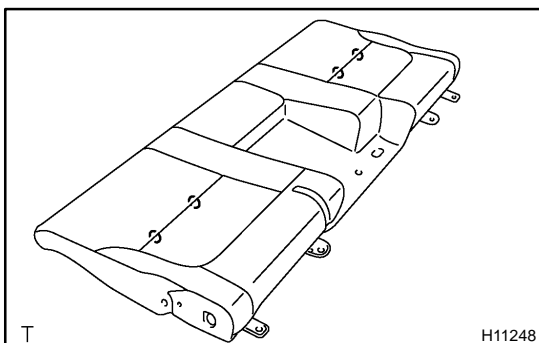

(b) Remove the hog rings and seatback cover.