

REMOVAL

HINT:

- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

1. REMOVE FRONT DOOR SCUFF PLATE LH

- Remove the 4 screws.
- Using a screwdriver, disengage the claw and remove the scuff plate.

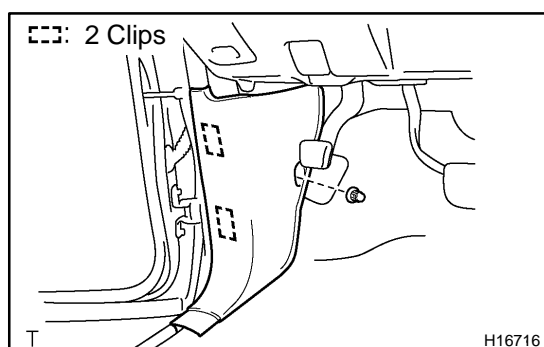
HINT:

Tape the screwdriver tip before use.

2. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.



3. REMOVE COWL SIDE TRIM BOARD LH

- Remove the nut, 2 clips and cowl side trim board.

4. REMOVE COWL SIDE TRIM BOARD RH

HINT:

Use the same procedures described for the LH side.

5. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

6. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

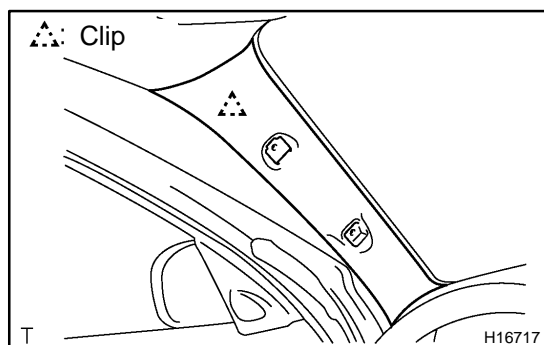
7. REMOVE FRONT PILLAR GARNISH LH

- Remove the assist grip.
 - Using a screwdriver, remove the 2 assist grip plugs.

HINT:

Tape the screwdriver tip before use.

- Remove the 2 screws and assist grip.

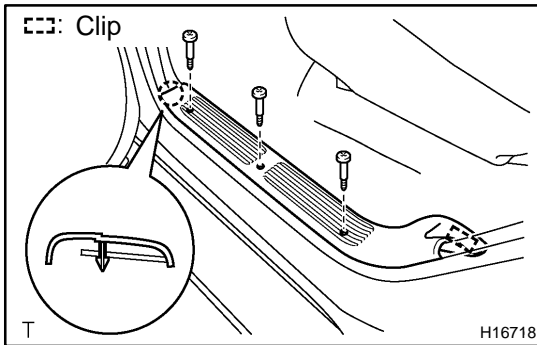


- Remove the front pillar garnish.
- Use the same manner described above to the other side.

8. REMOVE FRONT PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

**9. REMOVE REAR DOOR SCUFF PLATE LH**

- (a) Remove the 3 screws.
- (b) Using a screwdriver, disengage the claw and remove the scuff plate.

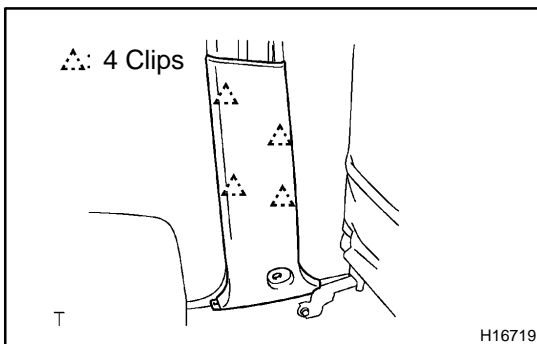
HINT:

Tape the screwdriver tip before use.

10. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

11. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH**12. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH****13. REMOVE LOWER CENTER PILLAR GARNISH LH**

- (a) Remove the front seat outer belt floor anchor.
Torque: 42 N·m (430 kgf-cm, 31 ft-lbf)
- (b) Using a screwdriver, remove the 4 clips and pillar garnish.

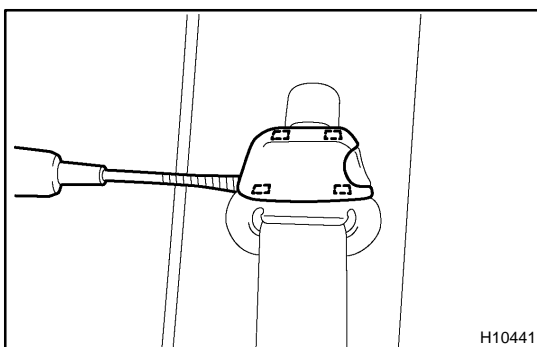
HINT:

Tape the screwdriver tip before use.

14. REMOVE LOWER CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

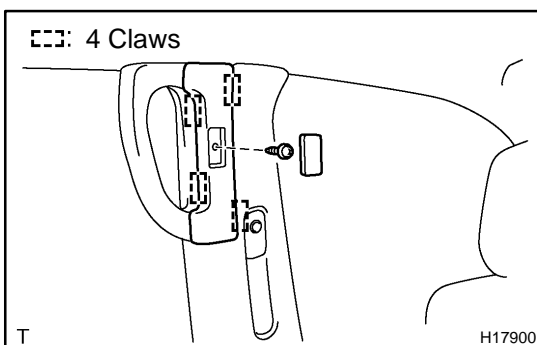
**15. REMOVE FRONT SEAT OUTER BELT SHOULDER ANCHOR**

- (a) Using a screwdriver, remove the anchor cap.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the front seat outer belt shoulder anchor.

Torque: 42 N·m (430 kgf-cm, 31 ft-lbf)**16. w/ Curtain shield airbag assembly: REMOVE ASSIST GRIP**

- (a) Using a screwdriver, remove the cap.

HINT:

Tape the screwdriver tip before use.

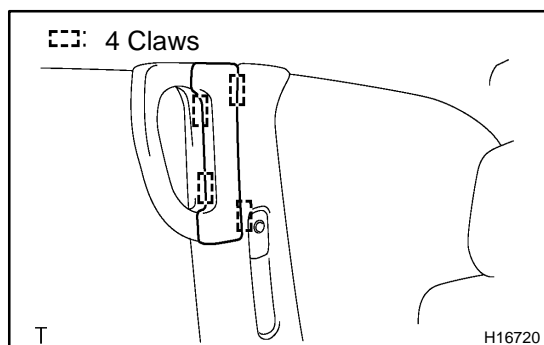
- (b) Remove the screw.

- (c) Using a screwdriver, remove the No. 2 assist grip plug.

HINT:

Tape the screwdriver tip before use.

- (d) Remove the 2 screws and assist grip.
- (e) Use the same manner described above to the other side.



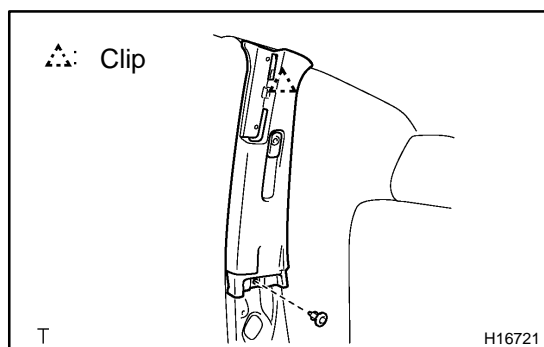
**17. w/o Curtain shield airbag assembly:
REMOVE ASSIST GRIP**

- (a) Using a screwdriver, remove the No. 2 assist grip piug.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and assist grip.
- (c) Use the same manner described above to the other side.



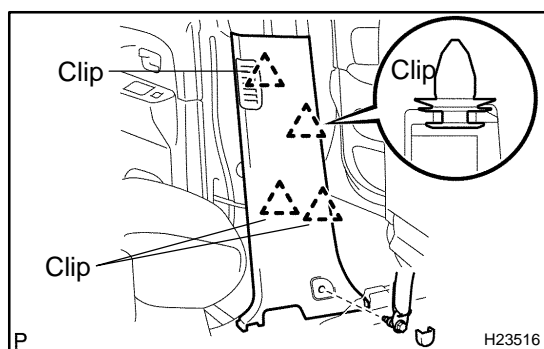
18. REMOVE CENTER PILLAR GARNISH UPPER LH

- (a) Using a clip remover, remove the clip labeled A, clip labeled B and garnish.

19. REMOVE CENTER PILLAR GARNISH UPPER RH

HINT:

Use the same procedures described for the RH side.



20. REMOVE CENTER PILLAR GARNISH LOWER LH

Using a screwdriver, remove the 4 clips and garnish.

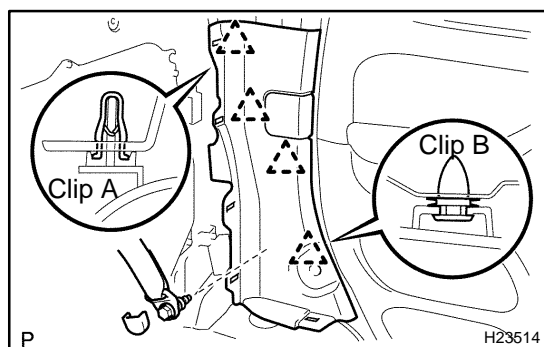
HINT:

Tape the screwdriver tip before use.

21. REMOVE CENTER PILLAR GARNISH LOWER RH

HINT:

Use the same procedures described for the RH side.



22. REMOVE QUARTER TRIM PANEL LOWER LH

- (a) Remove the rear floor anchor belt cover and bolt.
- (b) Using a screwdriver, remove the clip labeled A, 3 clips labeled B and pillar garnish.

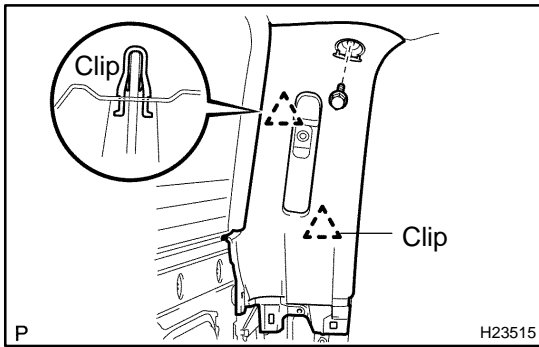
HINT:

Tape the screwdriver tip before use.

23. REMOVE QUARTER TRIM PANEL LOWER RH

HINT:

Use the same procedures described for the RH side.

**24. REMOVE QUARTER TRIM BOARD LH**

- (a) Remove the shoulder anchor bolt.
- (b) Using a screwdriver, remove the 2 clips and bolt.

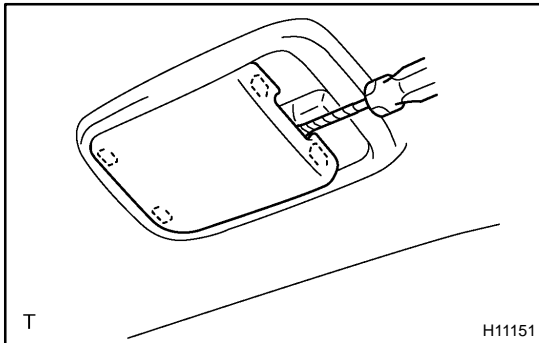
HINT:

Tape the screwdriver tip before use.

25. REMOVE QUARTER TRIM BOARD RH

HINT:

Use the same procedures described for the RH side.

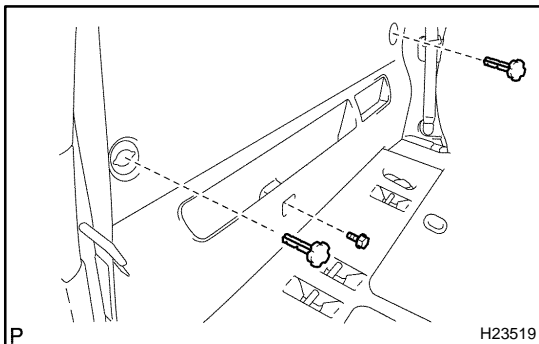
**26. REMOVE DOME LIGHT**

- (a) Using a screwdriver, remove the lens.

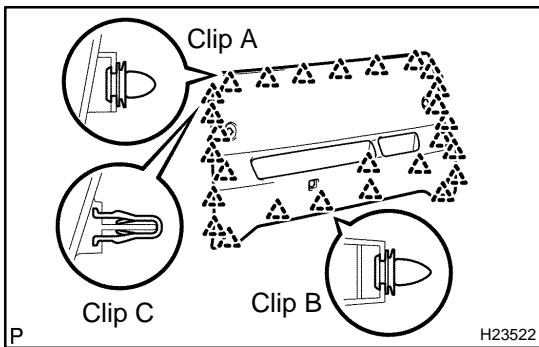
HINT:

Tape the screwdriver tip before use.

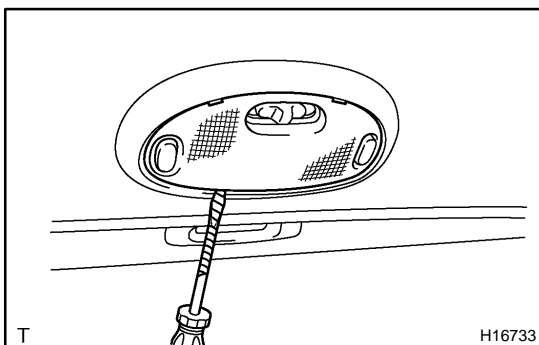
- (b) Remove the 2 screws and dome light, then disconnect the connector.

**27. BACK PANEL TRIM**

- (a) Remove the 2 clips and bolt.



- (b) Using a clip remover, remove the 6 clips labeled A and 7 clips labeled B, 14 clips labeled C and panel.

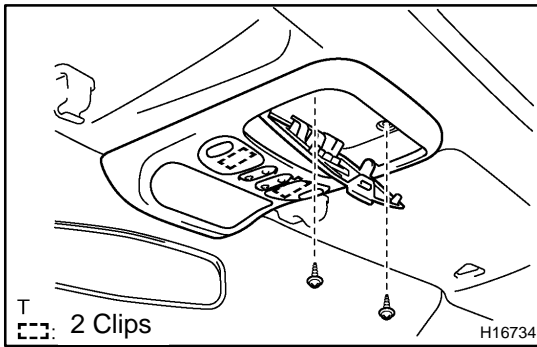
**28. REMOVE MAP LIGHT**

- (a) Using a screwdriver, remove the lens.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and map light, then disconnect the connector.

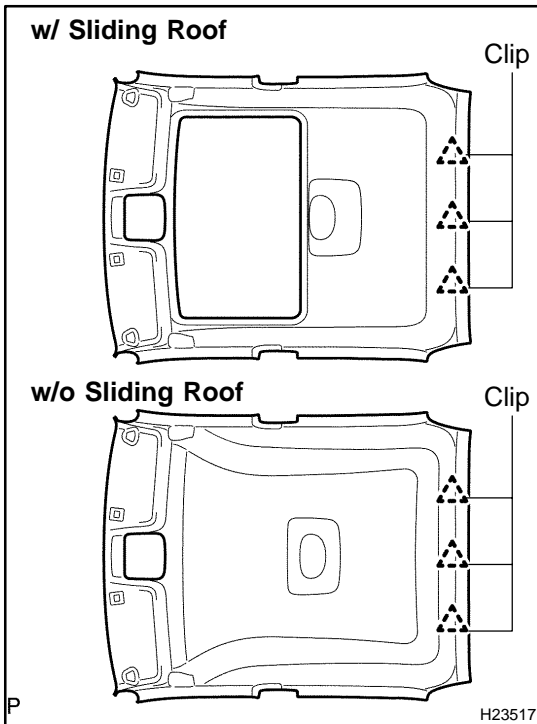
**29. REMOVE ROOF CONSOLE BOX**

- (a) Remove the 2 screws.
- (b) Using a screwdriver, remove the roof console box.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the connector.

30. REMOVE SUN VISORS AND HOLDERS**31. REMOVE ROOF HEADLINING**

Using a clip remover, remove the 3 clips and headlining.

- 32. REMOVE ROOF SILENCER PAD**
- 33. REMOVE FRONT SIDE RAIL SPACER LH**
- 34. REMOVE FRONT SIDE RAIL SPACER RH**
- 35. REMOVE REAR NO. 2 SIDE RAIL SPACER LH**
- 36. REMOVE REAR NO. 2 SIDE RAIL SPACER RH**
- 37. REMOVE FRONT PILLAR SPACER NO. 1 LH**
- 38. REMOVE FRONT PILLAR SPACER NO. 1 RH**
- 39. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH**
- 40. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH RH**
- 41. REMOVE INSTRUMENT PANEL LH**
- 42. REMOVE INSTRUMENT PANEL RH**
- 43. REMOVE CENTER PILLAR GARNISH PAD NO. 1 LH**
- 44. REMOVE CENTER PILLAR GARNISH PAD NO. 1 RH**
- 45. REMOVE ROOF HEADLINING TRIM RETAINER FRONT LH**
- 46. REMOVE ROOF HEADLINING TRIM RETAINER FRONT RH**
- 47. REMOVE FRONT VISOR SUPPORT PAD LH**
- 48. REMOVE FRONT VISOR SUPPORT PAD RH**
- 49. REMOVE ROOF HEADLINING TRIM RETAINER REAR LH**
- 50. REMOVE ROOF HEADLINING TRIM RETAINER REAR RH**
- 51. REMOVE ROOF HEADLINING PAD LH**
- 52. REMOVE ROOF HEADLINING PAD RH**