


SEAT BELT PRETENSIONER REMOVAL

BO4T3-02

NOTICE:

- If the wiring connector of the seat belt pretensioner is disconnected with the ignition switch ON, diagnostic trouble codes will be recorded.
- Never use a seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.

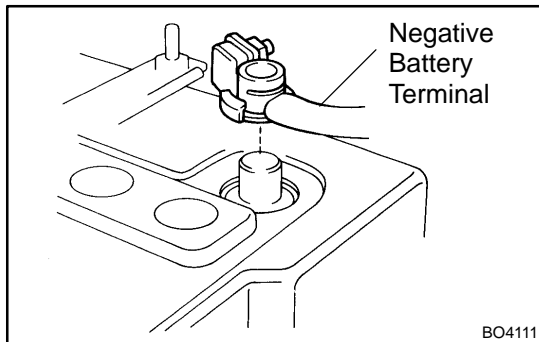

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Disconnect the cable from the negative (–) battery terminal.

NOTICE:

If the cable is disconnected from the negative battery terminal, the preset AM and FM stations stored in memory are erased. Be sure to make note of them before disconnecting the cable.

CAUTION:


Work must be started at least 90 seconds after the ignition switch is turned to the LOCK position and the cable is disconnected from the negative (–) battery terminal.

(The SRS is equipped with a back-up power source. If work is started within 90 seconds of disconnecting the cable from the negative (–) battery terminal, the SRS may deploy.)

2. Standard cab:

REMOVE FRONT SEAT OUTER BELT

- (a) Remove the 5 screws and front door scuff plate.

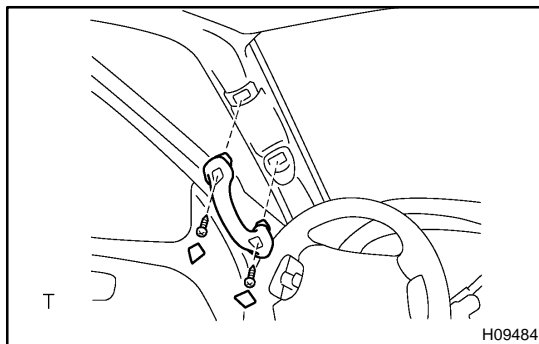

- (b) Remove the front pillar garnish.

- (1) Using a screwdriver, remove the caps.

HINT:

Tape the screwdriver tip before use.

- (2) Using a torx® driver, remove the torx® screws and assist grip.

Torx® driver:

T30 (Part No. 09041-00030 or locally manufactured tool)

- (3) Using a screwdriver, remove the front pillar garnish.

HINT:


Tape the screwdriver tip before use.


- (c) Remove the room partition garnishes.

- (1) Using a screwdriver, remove the back panel trim covers.

HINT:

Tape the screwdriver tip before use.

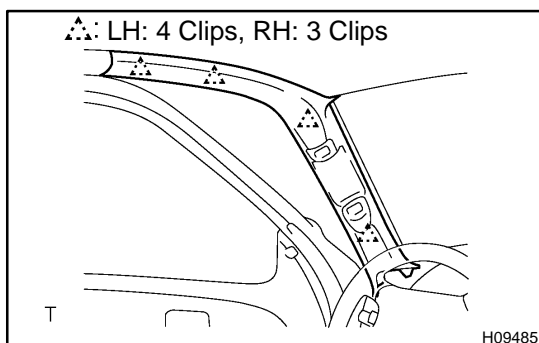



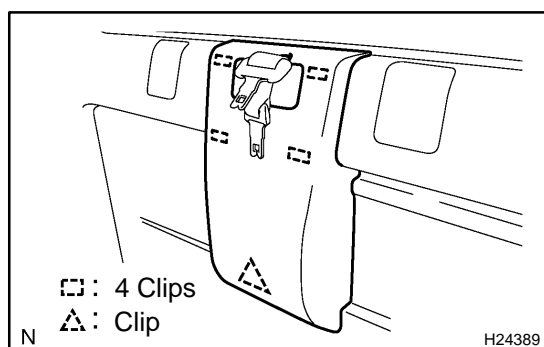


- (2) Using a screwdriver, remove the room partition garnishes.

HINT:

Tape the screwdriver tip before use.

- (d) Disconnect the connector, and remove the bolt and front seat outer belt floor anchor.

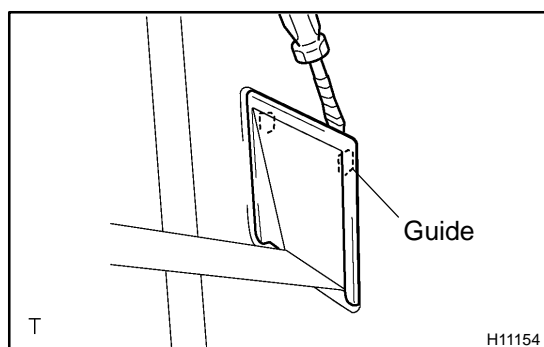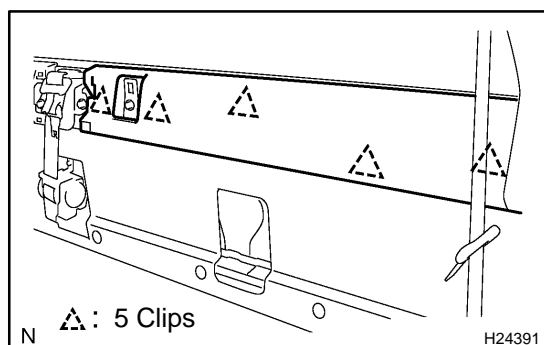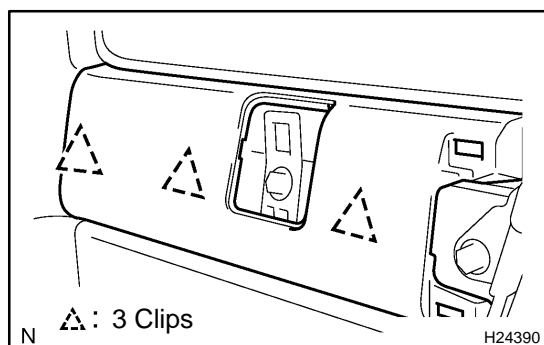


- (e) Remove the quarter trim.

- (1) Using a screwdriver, remove the quarter trim belt hole cover.

HINT:

Tape the screwdriver tip before use.

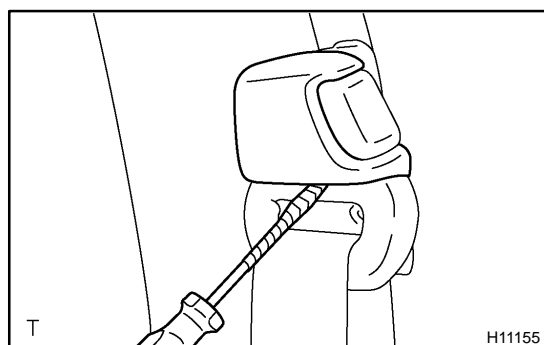


- (2) Using a screwdriver, remove the cap.

HINT:

Tape the screwdriver tip before use.

- (3) Remove the bolt and front seat outer belt shoulder anchor.

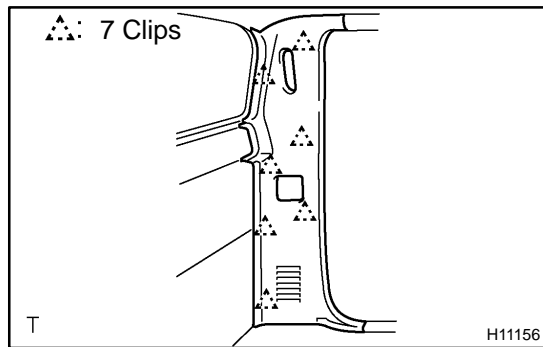

- (4) Using a screwdriver, remove the quarter trim.

HINT:

Tape the screwdriver tip before use.


- (f) Remove the retractor of the front seat outer belt.

CAUTION:

Never disassemble the front seat outer belt.

NOTICE:

When removing the retractor of the front seat outer belt, take care not to pull the seat belt pretensioner wire harness.

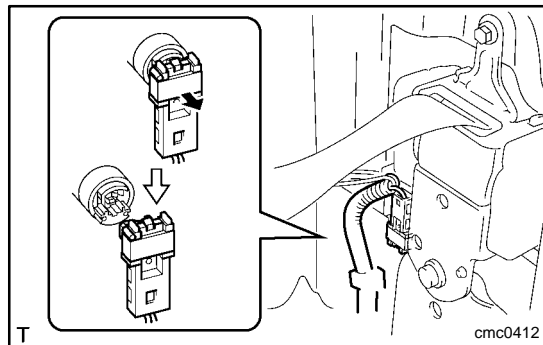


- (1) Disconnect the pretensioner connector as shown in the illustration.
 (2) Remove the 2 bolts and retractor of the front seat outer belt.

3. Access cab:

REMOVE FRONT SEAT OUTER BELT

- (a) Remove the 4 screws and front door scuff plate.
 (b) Remove the 3 screws and rear door scuff plate.
 (c) Remove the bolt and front seat outer belt floor anchor.

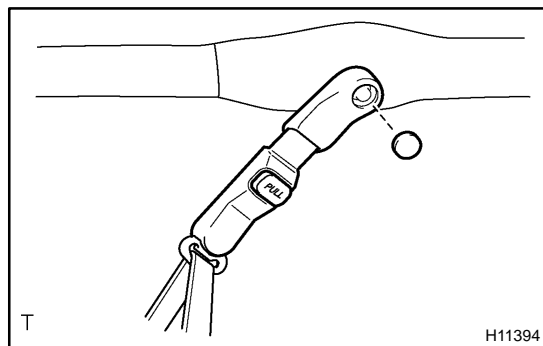

- (d) Remove the front seat outer belt shoulder anchor.

- (1) Using a screwdriver, remove the cap.

HINT:

Tape the screwdriver tip before use.

- (2) Remove the bolt and front seat outer belt shoulder anchor.

- (e) Remove the roof side rail garnish.

- (1) Using a screwdriver, remove the caps.


HINT:

Tape the screwdriver tip before use.

- (2) Using a torx® driver, remove the 2 torx® screws and assist grip.

Torx® driver:

T30 (Part No. 09041-00030 or locally manufactured tool)

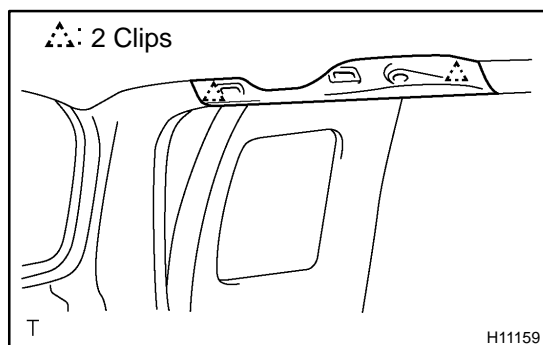

- (3) Using a screwdriver, remove the roof side rail garnish.

HINT:

Tape the screwdriver tip before use.

- (f) Remove the front door rear scuff plate and cover.

- (1) Remove the clip and cover.

- (2) Remove the clip and front door rear scuff plate.


- (g) Remove the retractor of the front seat outer belt.

CAUTION:


Never disassemble the front seat outer belt.

NOTICE:


When removing the retractor of the front seat outer belt, take care not to pull the seat belt pretensioner wire harness.

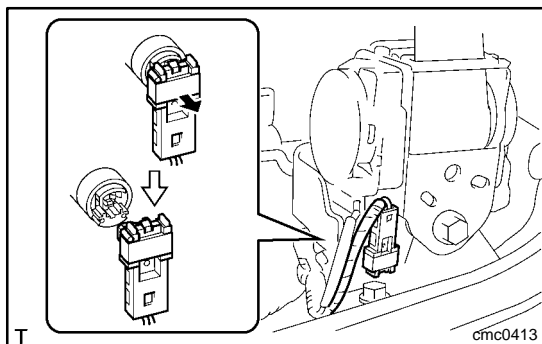

- (1) Disconnect the pretensioner connector as shown in the illustration.
- (2) Remove the 2 bolts and retractor of the front seat outer belt.

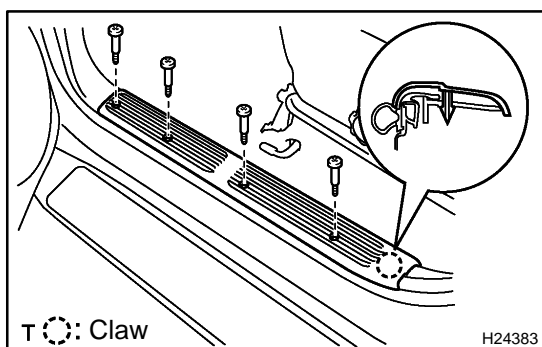**4. Double cab:****REMOVE FRONT SEAT OUTER BELT**

- (a) Remove the front door scuff plate.
 - (1) Remove the 4 screws, disengage the claw and front door scuff plate.
 - (2) Remove the front door opening trim weatherstrip.

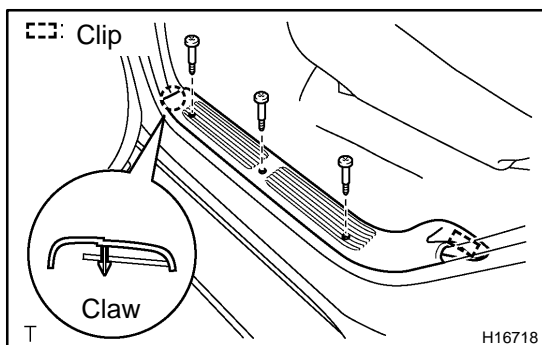


- (b) Remove the rear door scuff plate.
 - (1) Remove the 3 screws.
 - (2) Using a screwdriver, disengage the clip and remove the rear door scuff plate.

HINT:

Tape the screwdriver tip before use.

- (c) Remove the rear door opening trim weatherstrip.

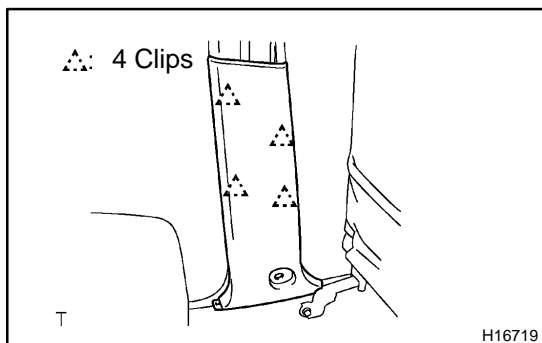


- (d) Remove the lower center pillar garnish.
 - (1) Remove the front seat outer belt floor anchor.
 - (2) Using a screwdriver, remove the lower center pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (e) Remove the front seat outer belt shoulder anchor.

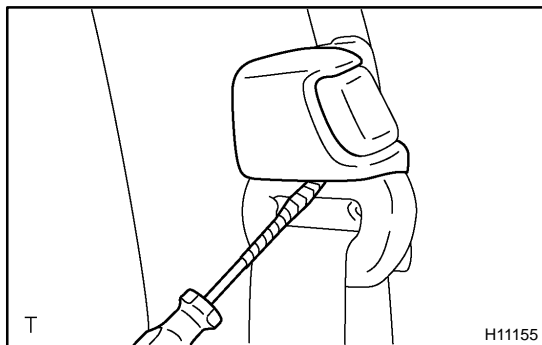

- (1) Using a screwdriver, remove the cap.

HINT:

Tape the screwdriver tip before use.

- (2) Remove the bolt and front seat outer belt shoulder anchor.


- (f) Remove the retractor of front seat outer belt.

CAUTION:

Never disassemble the front seat outer belt.

NOTICE:

When removing the retractor of front seat outer belt, take care not to pull the seat belt pretensioner wire harness.

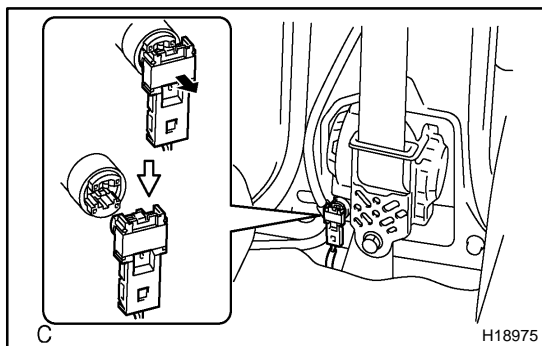

- (1) Using a screwdriver, pull the locking button of the pretension connector to your side to release the lock.

HINT:

Tape the screwdriver tip before use.

- (2) Disconnect the connector.
- (3) Remove the 2 bolts and the front seat outer belt assembly.