

INSTALLATION

1. INSTALL BRAKE BOOSTER

- (a) Install a new gasket to the brake booster.
- (b) Install the brake booster bracket and 2 stopper rings to the brake booster.
- (c) Install the booster and a new gasket.
- (d) Install the clevis to the operating rod.
- (e) Install and torque the booster installation nuts.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

- (f) Install the clevis pin into the clevis and brake pedal, and install the clip to the clevis pin.
- (g) Connect the vacuum hose to the brake booster.

2. INSTALL NO. 2 HEATER TO REGISTER DUCT, LOWER FINISH PANEL, COWL SIDE TRIM LH AND SCUFF PLATE (See page [BO-120](#))

NOTICE:

- Do not adjust the brake booster push rod.
 - Do not change the combination of the diameter converting unit and brake.
- 3. INSTALL MASTER CYLINDER (See page [BR-30](#))
 - 4. FILL BRAKE RESERVOIR WITH BRAKE FLUID AND BLEED BRAKE SYSTEM (See page [BR-4](#))
 - 5. CHECK FOR FLUID LEAKAGE
 - 6. CHECK AND ADJUST BRAKE PEDAL (See page [BR-10](#))
 - 7. DO OPERATIONAL CHECK (See page [BR-35](#))