

INSTALLATION

Installation is in the reverse order of removal (See page [BR-20](#)).

HINT:

- Before installation, adjust length of the brake booster push rod (see page [BR-34](#)).
- After installation, fill the brake reservoir with brake fluid and bleed the brake system (see page [BR-4](#)).
- Check for leaks, check and adjust the brake pedal (see page [BR-10](#)).
- Check brake pedal height (see page [BR-10](#)).
- Check the brake actuator with the hand-held tester (see page [BR-62](#)).