



INSPECTION

INSPECT HYDRAULIC BRAKE BOOSTER PUMP MOTOR ASSEMBLY OPERATION

- (a) Connect the positive (+) lead from the battery to the red cable of the pump motor, and the negative (–) lead to the black cable.
- (b) Check pump motor operation.

OK: Normal operating sound is heard.