


## REMOVAL

### 1. w/ LOAD SENSING VALVE

#### DISCONNECT SHACKLE NO. 2 FROM BRACKET

- (a) Remove the nut and cushion retainer, and disconnect shackle No. 2.
- (b) Remove the 2 bushings and collar.
- (c) Remove the 2 bolts and shackle bracket.

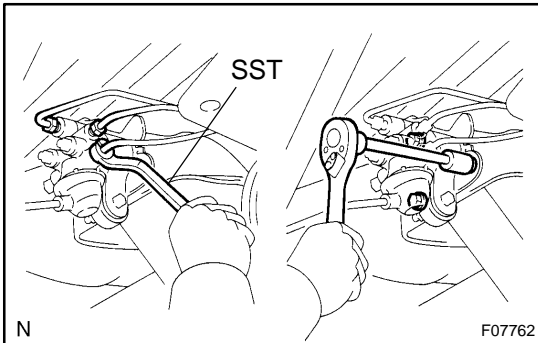

### 2. REMOVE LSP & BV ASSEMBLY

- (a) Using SST, disconnect the 3 brake lines from the valve body.

SST 09751-36011

- (b) Remove the 2 valve bracket mounting bolts and the LSP & BV assembly.

### 3. w/ BLEND PROPORTIONING VALVE

#### REMOVE BLEND PROPORTIONING VALVE ASSEMBLY

- (a) Disconnect the 4 brake lines.
- (b) Remove the 3 bolts and blend valve.

**Torque: 29 N·m (296 kgf-cm, 21 ft-lbf)**