

## PARKING BRAKE PEDAL ON-VEHICLE INSPECTION


BR109-05

### 1. CHECK PARKING BRAKE PEDAL TRAVEL

Depress the parking brake pedal all the way and count the number of clicks.

**Parking brake pedal travel at 294 N (30 kgf, 66 lbf):  
8 to 10 clicks**

If incorrect, adjust the parking brake.

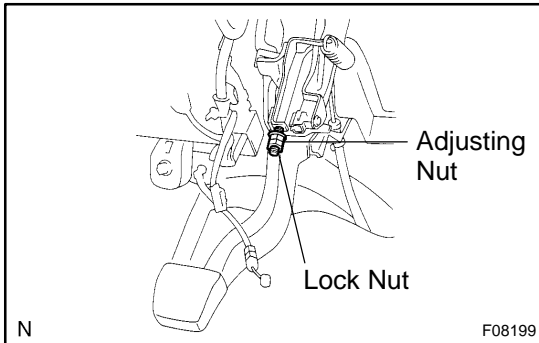

### 2. IF NECESSARY, ADJUST PARKING BRAKE PEDAL TRAVEL

#### HINT:

Before adjusting the parking brake, make sure that the rear brake shoe clearance has been adjusted. For shoe clearance adjustment, see step 3 on page [BR-52](#).

- Remove the scuff plate LH.
  - Remove the cowl side trim LH.
  - Remove the lower finish panel.
  - Remove the No. 2 heater to register duct.
  - Loosen the lock nut and turn the adjusting nut until the pedal travel is correct.
  - Tighten the lock nut.
- Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**
- Install the removed parts.