

INSTALLATION

Installation is in the reverse order of removal (See page [BR-101](#)).

HINT:

After installation, check the speed sensor signal
(See page [DI-1387](#) or [DI-1478](#)).