



REMOVAL

1. **REMOVE REAR WHEEL**
Torque: 113 N·m (1.150 kgf·cm, 83 ft·lbf)
2. **DISCONNECT SPEED SENSOR CONNECTOR**
3. **REMOVE SPEED SENSOR**
 - (a) Remove the bolt and speed sensor from the axle carrier.
Torque: 8.0 N·m (82 kgf·cm, 71 ft·lbf)