

INSTALLATION

- Installation is in the reverse order of removal (See page [BR-105](#)).
- Perform the yaw rate sensor zero point calibration (See page [DI-1474](#)).