

INSTALLATION

1. INSTALL GENERATOR

- (a) Install the generator with the bolt and nut.
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)
- (b) Connect the generator connector.
- (c) Connect the generator wire with the nut and rubber.
- (d) Install the terminal cap.
- (e) Install the wire clamp to the cord clip on the generator.

2. INSTALL PS VANE PUMP (See page [SR-69](#))

3. INSTALL DRIVE BELT

Install the belt by turning the belt tensioner counterclockwise.

HINT:

The pulley bolt for the belt tensioner has a left-hand thread.

- 4. **CONNECT INTAKE AIR CONNECTOR TO THROTTLE BODY**
- 5. **PERFORM ON-VEHICLE INSPECTION**
(See page [CH-1](#))
- 6. **INSTALL THROTTLE BODY COVER**
- 7. **INSTALL ENGINE UNDER COVER**
- 8. **CONNECT CABLE TO NEGATIVE (-) BATTERY TERMINAL**

