

## INSTALLATION

### 1. INSTALL GENERATOR

- (a) Install the generator with the bolt and 2 nuts.

**Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)**

- (b) Connect the generator connector.  
(c) Connect the generator wire with the nut.  
(d) Install the terminal cap.  
(e) Install the wire clamp to the cord clip on the generator.

### 2. INSTALL PS VANE PUMP (See page [SR-69](#))

### 3. INSTALL DRIVE BELT

Install the belt by turning the belt tensioner counterclockwise.

HINT:

The pulley bolt for the belt tensioner has a left-hand thread.

### 4. CONNECT INTAKE AIR CONNECTOR TO THROTTLE BODY

### 5. PERFORM ON-VEHICLE INSPECTION

(See page [CH-1](#))

### 6. INSTALL THROTTLE BODY COVER

### 7. INSTALL ENGINE UNDER COVER

### 8. CONNECT CABLE TO NEGATIVE (-) BATTERY TERMINAL

