


REMOVAL

1. REMOVE ENGINE UNDER COVER
2. REMOVE THROTTLE BODY COVER
3. DISCONNECT CABLE FROM NEGATIVE (-) BATTERY TERMINAL
4. DISCONNECT INTAKE AIR CONNECTOR FROM THROTTLE BODY

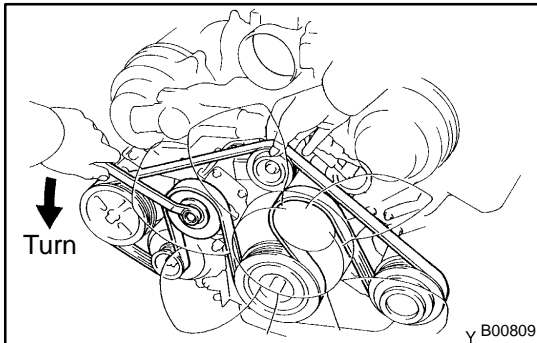

5. REMOVE GENERATOR DRIVE BELT

Loosen the belt tension by turning the belt tensioner counter-clockwise, and remove the drive belt.

HINT:

The pulley bolt for the belt tensioner has a left-hand thread.

6. REMOVE PS VANE PUMP FROM ENGINE

(See page [SR-61](#))

7. REMOVE GENERATOR

- (a) Disconnect the generator connector.
- (b) Remove the terminal cap and nut, and disconnect the generator wire.
- (c) Disconnect the wire clamp from the cord clip on the generator.
- (d) Remove the bolt, 2 nuts and generator.