


INSTALLATION

1. INSTALL NO.1 FAN SHROUD

Install the No.1 fan shroud with the 4 bolts.

Torque: 5.0 N·m (50 kgf·cm, 44 in.-lbf)

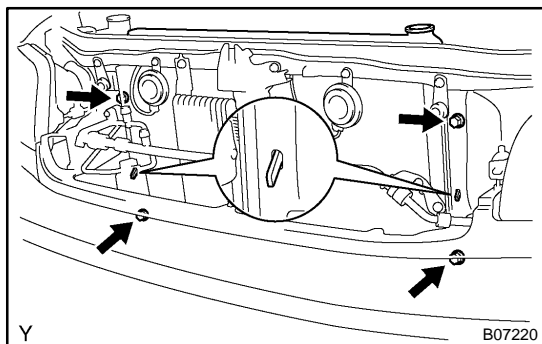

2. INSTALL RADIATOR ASSEMBLY

(a) Set the radiator bracket hooks to the radiator support holes.

(b) Install the 4 bolts.

Torque: 12 N·m (120 N·m, 9 ft-lbf)

3. INSTALL NO.2 FAN SHROUD

Install the No.2 fan shroud with the 2 clips.

4. **CONNECT A/T OIL COOLER HOSES TO RADIATOR**
5. **CONNECT UPPER RADIATOR HOSE TO RADIATOR**
6. **CONNECT LOWER RADIATOR HOSE TO RADIATOR**
7. **CONNECT RADIATOR RESERVOIR HOSE TO RADIATOR**
8. **FILL WITH ENGINE COOLANT**
9. **START ENGINE AND CHECK FOR ENGINE COOLANT LEAKS**
10. **RECHECK ENGINE COOLANT LEVEL**
11. **INSTALL ENGINE UNDER COVER**