


THERMOSTAT REMOVAL

CO1DA-01

HINT:

If the thermostat was not installed, cooling efficiency would be harmed. If the engine should tend to overheat, do not remove the thermostat.

1. **DRAIN ENGINE COOLANT (See page [CO-2](#))**
2. **REMOVE V-BANK COVER**
3. **DISCONNECT RADIATOR OUTLET, NO.2 HOSE CLAMP OR CLIP**

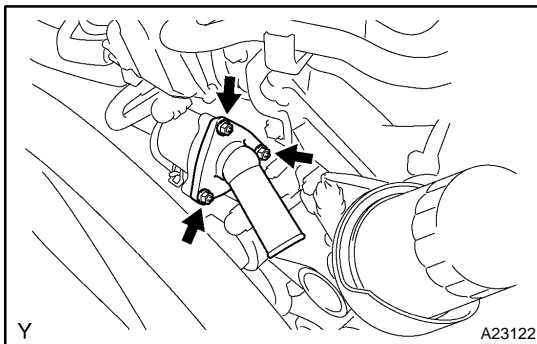

4. **REMOVE WATER INLET W/THERMOSTAT**
 - (a) Remove the 3 nuts, water inlet w/ thermostat and gasket.