


## REMOVAL

1. REMOVE ENGINE UNDER COVER
2. DRAIN ENGINE COOLANT
3. DISCONNECT RADIATOR RESERVOIR HOSE FROM RADIATOR
4. DISCONNECT UPPER RADIATOR HOSE FROM RADIATOR
5. DISCONNECT LOWER RADIATOR HOSE FROM RADIATOR
6. DISCONNECT A/T OIL COOLER HOSES FROM RADIATOR
7. REMOVE NO.2 FAN SHROUD

Remove the 2 clips and No.2 fan shroud.

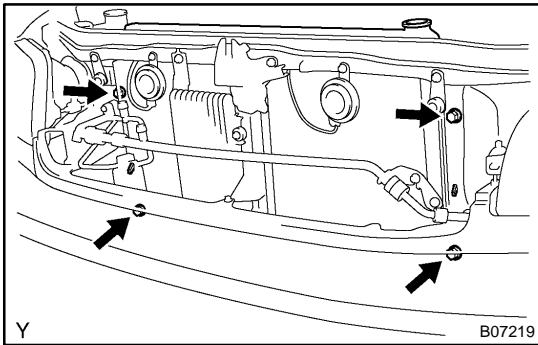

8. REMOVE RADIATOR ASSEMBLY

Remove the 4 bolts and radiator assembly.

9. REMOVE NO.1 FAN SHROUD

Remove the 4 bolts and No.1 fan shroud.