

## ENGINE (1GR-FE)

DIDSK-01

### PRECAUTION

**NOTICE:**

Perform the RESET MEMORY (AT initialization) when replacing the automatic transaxle assembly, engine assembly or ECM (see page [DI-961](#)).

**HINT:**

RESET MEMORY (AT initialization) can not be completed by only removing the battery.