

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	1. Cranking holding function circuit 2. Starter 3. Starter relay 4. Park/neutral position switch	DI-404 ST-1 ST-26 DI-993
No initial combustion (Does not start)	1. ECM power source circuit 2. Fuel pump control circuit 3. Engine control module (ECM)	DI-409 DI-414 IN-30
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-414
Engine cranks normally but difficult to start	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-276 DI-414 EM-3
Difficult to start with cold engine	1. Starter signal circuit 2. Fuel pump control circuit	DI-276 DI-414
Difficult to start with hot engine	1. Starter signal circuit 2. Fuel pump control circuit	DI-276 DI-414
High engine idle speed (Poor idling)	1. A/C switch circuit 2. ECM power source circuit	– DI-409
Low engine idle speed (Poor idling)	1. A/C switch circuit 2. Fuel pump control circuit	– DI-414
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	DI-414
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	IN-30 DI-414
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-414 –
Surging (Poor driveability)	1. Fuel pump control circuit	DI-414
Engine stalls soon after starting	1. Fuel pump control circuit	DI-414
Engine stalls during A/C operation	1. A/C switch circuit 2. Engine control module (ECM)	– IN-30
Unable to refuel/Difficult to refuel	1. ORVR system	–