

## CHECK FOR INTERMITTENT PROBLEMS

### HINT:

Hand-held tester only:

Inspect the vehicle's ECM using check mode. Intermittent problems are easier to detect with a hand-held tester when the ECM is in check mode. In check mode, the ECM uses 1trip detection logic, which is more sensitive to malfunctions than normal mode (default), which uses 2 trip detection logic.

- (a) Clear DTCs (see page [DI-462](#)).
- (b) Switch the ECM from normal mode to check mode using a hand-held tester (see page [DI-463](#)).
- (c) Perform a simulation test (see page [IN-19](#)).
- (d) Check and wiggle the harness(es), connector(s) and terminal(s) (see page [IN-30](#)).