

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	1. Starter 2. Starter relay 3. Park/neutral position switch	ST-1 ST-20 DI-1159
No initial combustion (Does not start)	1. ECM power source circuit 2. Fuel pump control circuit 3. ECM	DI-918 DI-937 IN-30
No complete combustion (Does not start)	Fuel pump control circuit	DI-937
Engine cranks normally but difficult to start	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-723 DI-937 EM-3
Difficult to start with cold engine	1. Starter signal circuit 2. Fuel pump control circuit	DI-723 DI-937
Difficult to start with hot engine	1. Starter signal circuit 2. Fuel pump control circuit	DI-723 DI-937
High engine idle speed (Poor idling)	1. A/C switch circuit 2. ECM power source circuit	– DI-918
Low engine idle speed (Poor idling)	1. A/C switch circuit 2. Fuel pump control circuit	– DI-937
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-937
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-918 DI-937
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-937 –
Surging (Poor driveability)	Fuel pump control circuit	DI-937
Engine stalls soon after starting	Fuel pump control circuit	DI-937
Engine stalls during A/C operation	1. A/C switch circuit 2. ECM	– IN-30