


REASSEMBLY

1. INSTALL AIR SWITCHING VALVE

- (a) Install the No.1 air hose to the air switching valve and air pump.
- (b) Install the air switching valve with the 2 bolts to the air pump bracket.

Torque: 16 N·m (163 kgf·cm, 12 ft·lbf)

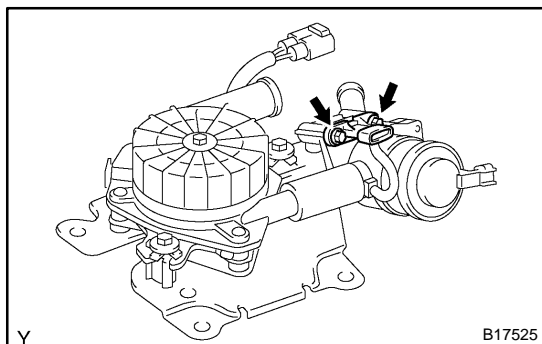

2. INSTALL PRESSURE SENSOR

- (a) Install the pressure sensor with the 2 bolts to the air switching valve.

Torque: 5.0 N·m (55 kgf·cm, 48 in.-lbf)

- (b) Install the vacuum hose to the pressure sensor and air switching valve.