

INSPECTION

INSPECT CRANKSHAFT POSITION SENSOR

Using an ohmmeter, measure the resistance between the terminals.

RESISTANCE:

1,630 to 2,740 Ω at cold

2,065 to 3,225 Ω at hot

NOTICE:

"Cold" and "Hot" mean the temperature of the coils themselves. "Cold" is from -10°C (14°F) to 50°C (122°F) and "Hot" is from 50°C (122°F) to 100°C (212°F).