


REMOVAL

1. REMOVE V-BANK COVER
2. REMOVE AIR CLEANER (See page [EM-62](#))
3. REMOVE INTAKE AIR SURGE TANK
(See page [EM-62](#))
4. REMOVE IGNITION COIL
 - (a) Disconnect the ignition coil connector.

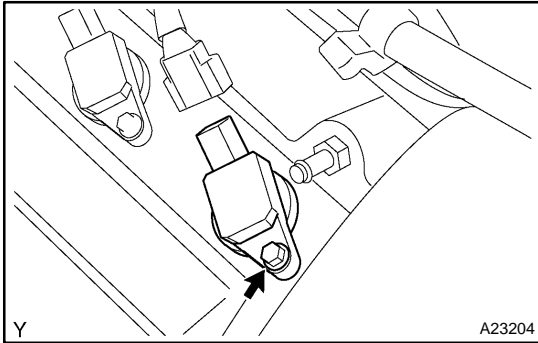

- (b) Remove the bolt and ignition coil.