

VVT SENSOR REMOVAL


IGOMP-01

1. DRAIN ENGINE COOLANT
2. REMOVE V-BANK COVER
3. REMOVE AIR CLEANER (See page [EM-62](#))

4. REMOVE VVT SENSOR


(a) RH bank side VVT sensor.

- (1) Disconnect the VVT sensor connector.
- (2) Remove the bolt and VVT sensor.

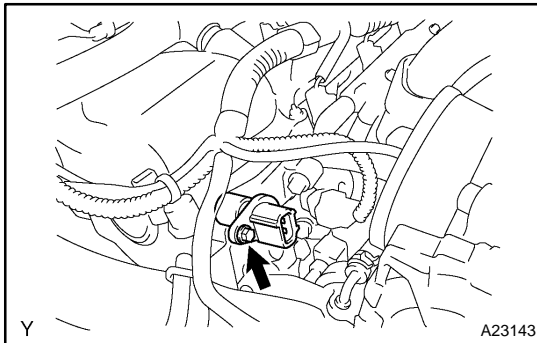

(b) LH bank side VVT sensor.

- (1) Disconnect the water by-pass hose No. 4 and No. 5.
- (2) Disconnect the VVT sensor connector.

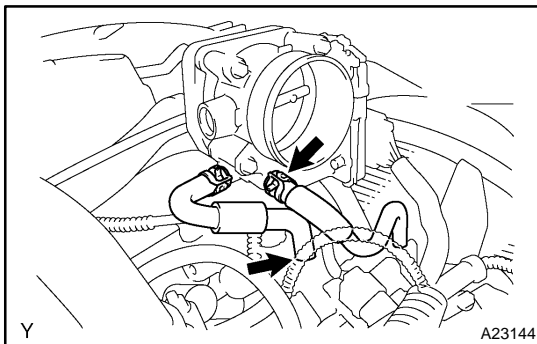

- (3) Remove the bolt and VVT sensor.

