


## REMOVAL

### 1. REMOVE ENGINE UNDER COVER

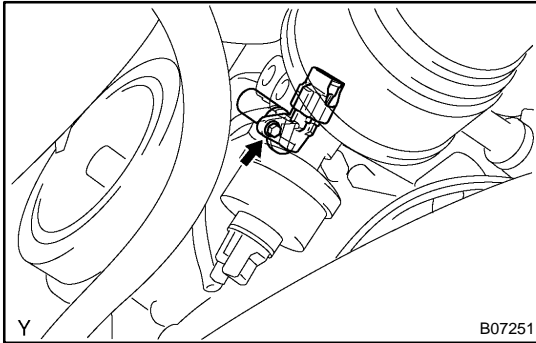

### 2. REMOVE CRANKSHAFT POSITION SENSOR

- (a) Disconnect the crankshaft position sensor connector.
- (b) Remove the bolt and crankshaft position sensor.