



INSTALLATION

1. INSTALL OIL NOZZLE (WITH RELIEF VALVE)

Using a 5 mm hexagon wrench, install the oil nozzle with the bolt.

Torque: 9.0 N·m (92 kgf·cm, 80 in.-lbf)

2. INSTALL CRANKSHAFT (See page [EM-118](#))