

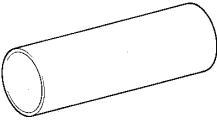 
 

 
 
 
 
 
 

 
 
 
 
 

 
 
 

 



MANUAL TRANSMISSION (RA60)

SST (Special Service Tools)

PP444-01

	09023-00101 Union Nut Wrench 10mm	MANUAL TRANSMISSION UNIT
	09255-10012 Crankshaft Rear Bearing Remover & Replacer	MANUAL TRANSMISSION ASSEMBLY
	09308-14010 Replacer Pipe A	COUNTER GEAR INPUT SHAFT
	09308-55010 Oil Seal Puller	MANUAL TRANSMISSION ASSEMBLY
	09309-37010 Transmission Bearing Replacer	COUNTER GEAR INPUT SHAFT
	09388-40010 Input Oil Seal Replacer	MANUAL TRANSMISSION ASSEMBLY
	09520-00031 Rear Axle Shaft Puller	MANUAL TRANSMISSION ASSEMBLY
	09556-16030 Differential Drive Pinion Holding Tool 28	MANUAL TRANSMISSION ASSEMBLY
	(09608-03070) Replacer <mk2>	COUNTER GEAR
	09608-06041 Front Hub Inner Bearing Cone Replacer	COUNTER GEAR
	09710-20010 Front Suspension Bushing Tool Set<mk2>	OUTPUT SHAFT
	(09710-06060) Spacer<mk2>	OUTPUT SHAFT

	09817-16011	Back-up Light Switch Tool	MANUAL ASSEMBLY	TRANSMISSION
	09922-10010	Variable Open Wrench	MANUAL ASSEMBLY	TRANSMISSION
	09950-00020	Bearing Remover	COUNTER GEAR OUTPUT SHAFT INPUT SHAFT	
	09950-60010	Replacer Set	COUNTER GEAR OUTPUT SHAFT MANUAL ASSEMBLY	TRANSMISSION
	(09951-00540)	Replacer 54	COUNTER GEAR	
	(09951-00650)	Replacer 65	OUTPUT SHAFT MANUAL ASSEMBLY	TRANSMISSION
	09950-60020	Replacer Set No.2	MANUAL ASSEMBLY	TRANSMISSION
	(09951-00640)	Replacer 64	MANUAL ASSEMBLY	TRANSMISSION
	09950-70010	Handle Set	MANUAL ASSEMBLY	TRANSMISSION
	(09951-07100)	Handle 100	MANUAL ASSEMBLY	TRANSMISSION
	(09951-07360)	Handle 360	MANUAL ASSEMBLY	TRANSMISSION
	(09951-07360)	Handle 360	MANUAL ASSEMBLY	TRANSMISSION