 

 
 
 
 
 
 
 
 
 
 


 
 
 

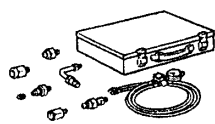 
 
 
 

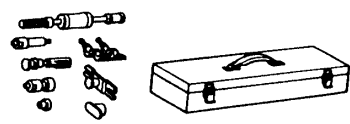 

 
 
# STEERING

 
 
 
 
 
 







## SST (Special Service Tools)

PP447-01








 
 




	09023-12701 Union Nut Wrench 17mm	PS gear
	09023-38401 Union Nut Wrench 14mm	PS gear
	09521-24010 Drive Shaft Boot Clamping Tool	PS gear
	09527-20011 Rear Axle Shaft Bearing Remover	PS gear
	09612-00012 Rack & Pinion Steering Rack Housing Stand	PS gear
	09612-07010 Main Shaft Retaining Ring Remover & Replacer	Steering column
	09612-22011 Tilt Handle Bearing Replacer	PS gear
	09612-24014 Steering Gear Housing Overhaul Tool Set	
	(09613-22011) Steering Rack Shaft Bushing Puller	PS gear
	09616-00011 Steering Worm Bearing Adjusting Socket	PS gear
	09630-00014 Power Steering Gear Housing Overhaul Tool Set	
	(09631-00132) Vane Pump Bracket	PS vane pump (1GR-FE)

## PREPARATION - STEERING

	09631-12071 Steering Rack Oil Seal Test Tool	PS gear
	09631-16010 Cylinder End Stopper Nut Wrench	PS gear
	09631-20051 Steering Rack Cover "C"	PS gear
	09631-20081 Seal Ring Tool	PS gear
	09640-10010 Power Steering Pressure Gauge Set	
	(09641-01010) Gauge Assy	Power steering fluid
	(09641-01030) Attachment B	Power steering fluid
	(09641-01060) Attachment E	Power steering fluid
	09816-30010 Oil Pressure Switch Socket	PS gear
	09910-00015 Puller Set	
	(09911-00011) Puller Clamp	Steering column
	(09912-00010) Puller Slide Hammer	Steering column
	09922-10010 Variable Open Wrench	PS gear

	09950-50013 Puller C Set	
	(09951-05010) Hanger 150	Steering column
	(09952-05010) Slide Arm	Steering column
	(09953-05020) Center Bolt 150	Steering column
	(09954-05021) Claw No.2	Steering column
	09950-60010 Replacer Set	
	(09951-00180) Replacer 18	PS gear
	(09951-00250) Replacer 25	PS gear
	(09951-00260) Replacer 26	PS gear
	(09951-00280) Replacer 28	PS vane pump (1GR-FE)
	(09951-00300) Replacer 30	PS gear
	(09951-00310) Replacer 31	PS gear
	(09951-00320) Replacer 32	PS gear

## PREPARATION – STEERING

	(09951-00330) Replacer 33	PS vane pump (2UZ-FE)
	(09951-00340) Replacer 34	PS gear
	(09951-00360) Replacer 36	PS gear
	(09951-00400) Replacer 40	Steering column (Double Cab)
	(09951-00430) Replacer 43	Steering column (Standard Cab, Access Cab)
	(09951-00460) Replacer 46	Steering column PS gear
	(09951-00490) Replacer 49	PS gear
	(09952-06010) Adapter	PS gear
	09950-70010 Handle Set	
	(09951-07100) Handle 100	PS vane pump (1GR-FE, 2UZ-FE)
	(09951-07150) Handle 150	Steering column PS gear
	(09951-07200) Handle 200	PS gear
	(09951-07360) Handle 360	Steering column PS gear