


DISASSEMBLY

NOTICE:

Be careful not to grip the propeller shaft tube too tightly in a vise as this will cause deformation.

1. SEPARATE PROPELLER SHAFT AND INTERMEDIATE SHAFT

- (a) Place matchmarks on the yoke and propeller shaft.
- (b) Disassemble the center yoke
(See SPIDER BEARING REPLACEMENT on page [PR-17](#)).

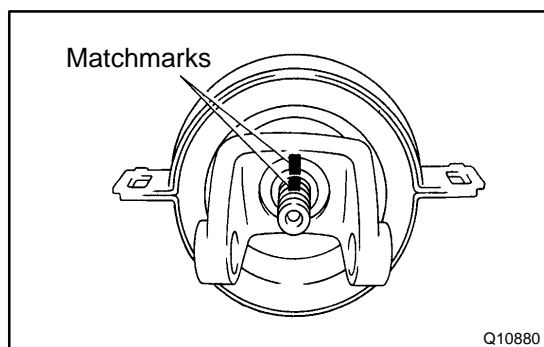

2. REMOVE CENTER SUPPORT BEARING FROM INTERMEDIATE SHAFT

- (a) Using a hammer and chisel, loosen the staked part of the nut.
- (b) Clamp the yoke in a vise and remove the spacer and nut.
- (c) Place matchmarks on the yoke and shaft.
- (d) Using a brass bar and hammer, remove the center yoke, dust cover, spacer and center support bearing from the intermediate shaft.