

# TROUBLESHOOTING

PR01F-05

## PROBLEM SYMPTOMS TABLE

Use the table below to help find the cause of problems. The numbers indicate the priority of the likely cause of the problem. Check each part in order. If necessary, replace these parts.

### 2WD:

Symptom	Suspected Area	See page
Noise	1. Center support bearing (Worn) 2. Sleeve yoke spline (Worn) 3. Spider bearing (Worn or stuck)	<a href="#">PR-5</a> – <a href="#">PR-5</a>
Vibration	1. Transmission extension housing rear bushing (Runout) 2. Sleeve yoke spline (Stuck) 3. Propeller shaft (Runout) 4. Propeller shaft (Imbalance)	– – <a href="#">PR-5</a> <a href="#">PR-5</a>

### 4WD:

Symptom	Suspected Area	See page
Noise	1. Center support bearing (Worn) 2. Sleeve yoke spline (Worn) 3. Spider bearing (Worn or stuck)	<a href="#">PR-12</a> – <a href="#">PR-12</a>
Vibration	1. Transmission extension housing rear bushing (Runout) 2. Sleeve yoke spline (Stuck) 3. Propeller shaft (Runout) 4. Propeller shaft (Imbalance)	– – <a href="#">PR-12</a> <a href="#">PR-12</a>