


INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

NOTICE:

- **Never use SRS parts from another vehicle. When replacing parts, replace them with new ones.**
- **Never reuse the curtain shield airbag sensor assembly involved in a collision when the airbag has deployed.**
- **If the curtain shield airbag sensor assembly center has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the curtain shield airbag sensor assembly center, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**
- **After installing, shake the curtain shield airbag sensor assembly to check that there is no looseness.**

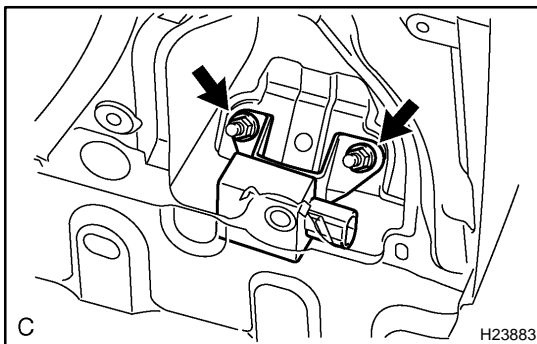

1. **INSTALL CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY LH**
 - (a) Install the curtain shield airbag sensor assembly LH with the 2 nuts.
Torque: 17.5 N·m (179 kgf·cm, 13 ft·lbf)
 - (b) Connect the curtain shield airbag sensor assembly LH connector.
2. **INSTALL REAR SEAT OUTER BELT RETRACTOR (SEE PAGE [BO-252](#))**
3. **INSTALL QUARTER TRIM PANEL LOWER LH (SEE PAGE [BO-138](#))**
4. **INSTALL REAR SEAT OUTER BELT FLOOR ANCHOR (SEE PAGE [BO-138](#))**
5. **INSTALL BACK PANEL TRIM ASSEMBLY (SEE PAGE [BO-138](#))**
6. **INSTALL REAR DOOR SCUFF PLATE (SEE PAGE [BO-138](#))**
7. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
8. **INSPECT SRS WARNING LIGHT (SEE PAGE [DI-1839](#))**