

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.


NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch in the ON position, DTCs will be recorded.
- Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.
- Never reuse a front airbag sensor if the airbag has previously deployed in a collision.

1. PRECAUTION (SEE PAGE RS-1 AND RS-3)

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

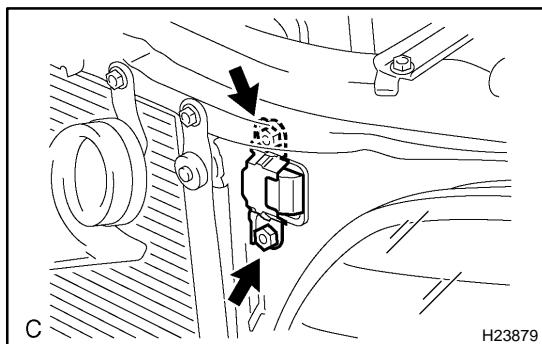

3. REMOVE FRONT AIRBAG SENSOR LH

- (a) Disconnect the front airbag sensor LH connector.

NOTICE:

Disconnect the connector with the sensor assembly installed.

- (b) Remove the 2 nuts and front airbag sensor LH.