



## REMOVAL

1. **PRECAUTION (SEE PAGE [RS-1](#) AND [RS-3](#))**
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

3. **REMOVE LOWER FINISH PANEL  
(SEE PAGE [BO-111](#))**

4. **REMOVE SWITCH BASE**

- (a) Using a screwdriver, remove the 3 claws and switch base.

HINT:

Tape up the screwdriver tip before use.

- (b) Disconnect the connectors.