

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in the ACC or ON position, DTCs will be recorded.
- Never use airbag parts from another vehicle. When replacing parts, replace them with new ones.

1. PRECAUTION (SEE PAGE RS-1 AND RS-3)
2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

3. REMOVE SEAT TRACK COVERS

Using a screwdriver, remove the seat track covers.

HINT:

Tape the screwdriver tip before use.


4. REMOVE FRONT SEAT

- (a) Remove the 4 bolts.
- (b) Disconnect the connectors.
- (c) w/ Side airbag:
Disconnect the airbag connector.
- (d) Remove the front seat.

NOTICE:

Be careful not to damage the body.

5. REMOVE HEADREST

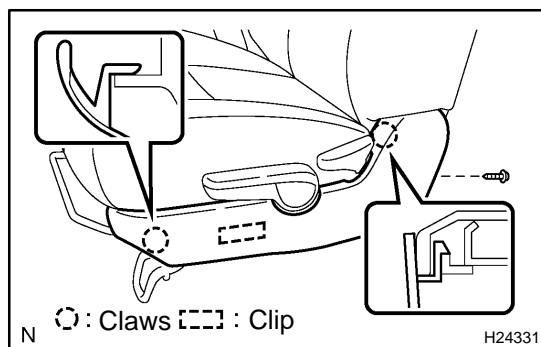


6. REMOVE SEAT CUSHION OUTER SHIELD

- (a) Remove the screw from the seat cushion outer shield.
- (b) Using a screwdriver, remove the seat cushion outer shield.

HINT:

Tape the screwdriver tip before use.

7. REMOVE RECLINING ADJUSTER RELEASE HANDLE

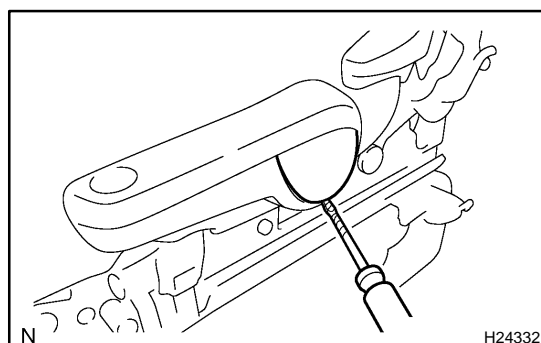


8. REMOVE VERTICAL ADJUSTER HANDLE


- (a) Using a screwdriver, remove the vertical adjuster handle cap.

HINT:

Tape the screwdriver tip before use.

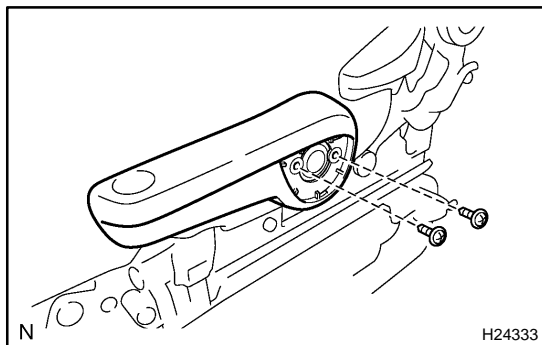

- (b) Remove the 2 screws and vertical adjuster handle.

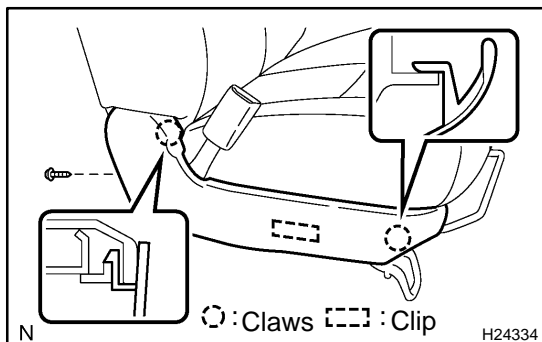

9. REMOVE SEAT CUSHION INNER SHIELD


- (a) Remove the screw from the seat cushion inner shield.
 (b) Using a screwdriver, remove the seat cushion inner shield.

HINT:

Tape the screwdriver tip before use.


10. REMOVE FRONT SEAT INNER BELT

- (a) Disconnect the wire harness clamps and connectors.
 (b) Remove the nut and front seat inner belt.

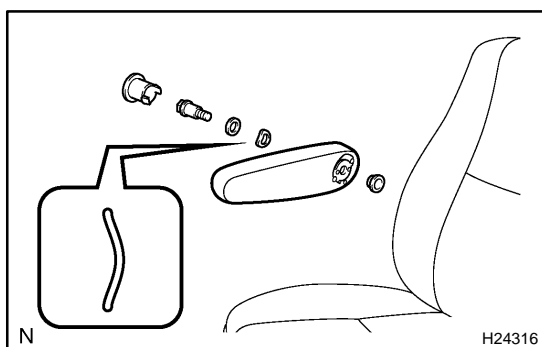


11. REMOVE ARMREST ASSEMBLY

- (a) Using a screwdriver, remove the armrest cap.
 (b) Remove the bolt, armrest spacer, armrest lock plate and armrest assembly.
 (c) Remove the spacer from the armrest assembly.

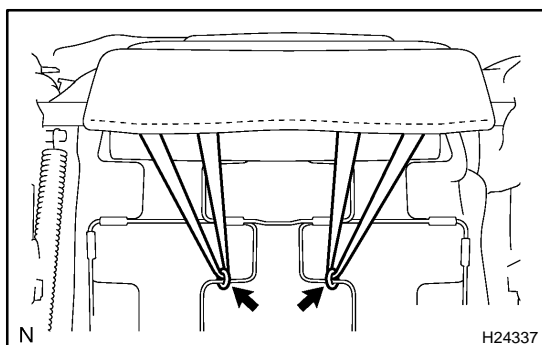


12. REMOVE SEATBACK COVER AND PAD


- (a) Remove the seatback cover lower part from the seat frame assembly.
 (b) Open the fastener.

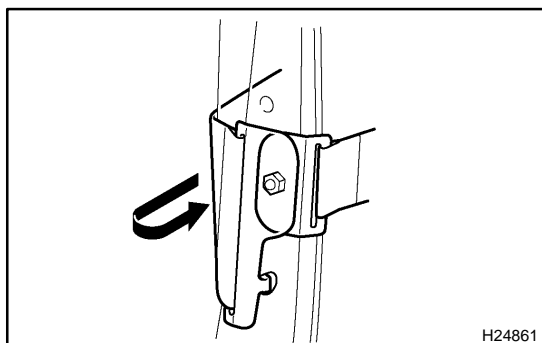


- (c) w/ Side airbag:
 Remove the nut and disconnect the seatback cover bracket from the seat frame assembly.

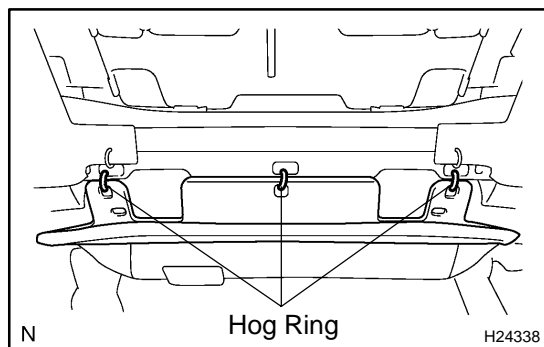


- (d) Remove the hog rings from the seat frame assembly.

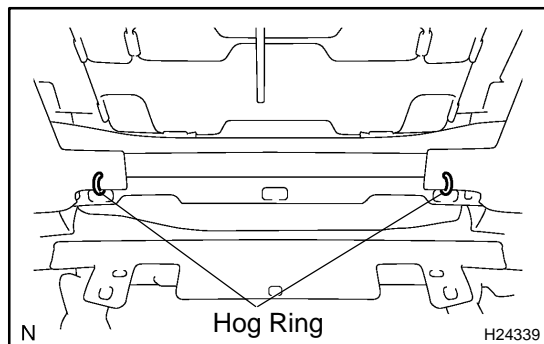

- (e) Remove the hog rings from the seat frame assembly.

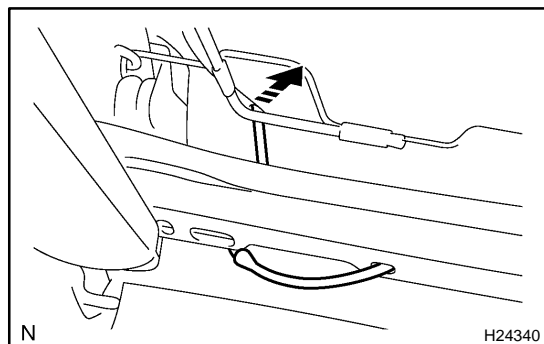

- (f) Remove the hog rings shown in the illustration from the seat frame assembly.
- (g) Remove the seatback cover and pad from the seat frame assembly.

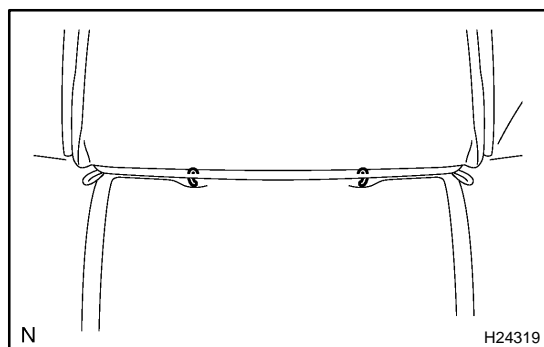

13. REMOVE SEATBACK COVER

- (a) Turn up the seatback cover and remove the hog rings.
- (b) Remove the 2 headrest supports.
- (c) Remove the seatback cover from the seatback pad.