

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the seat frame assembly or seatback cover with a new one.

| Case | Replacing part |
|---|---------------------|
| The side airbag has been deployed. | Seat assembly |
| The side airbag assembly has been found to be faulty in troubleshooting. | Seat frame assembly |
| The side airbag assembly has been found to have cuts while checking items (see page RS-67). | Seat frame assembly |
| The seatback cover has been found to have cuts while checking items (see page RS-67). | Seatback cover |
| The side airbag assembly has been found to be faulty while checking items (see page RS-67). | Seat frame assembly |
| The seatback cover has been found to be faulty while checking items (see page RS-67). | Seatback cover |
| The front seat adjuster LH has been dropped. | Seat frame assembly |

CAUTION:

For removal and installation procedures of the seat frame assembly, see page RS-64 and RS-70. Be sure to follow the correct procedure.